


30. Parking Pawl

A: REMOVAL


- 1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-34, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the rear vehicle speed sensor, and separate the extension case from transmission case. <Ref. to 4AT-69, REMOVAL, Extension Case.>
- 3) Remove the reduction drive gear. <Ref. to 4AT-78, REMOVAL, Reduction Drive Gear.>
- 4) Remove the parking pawl, return spring and shaft.

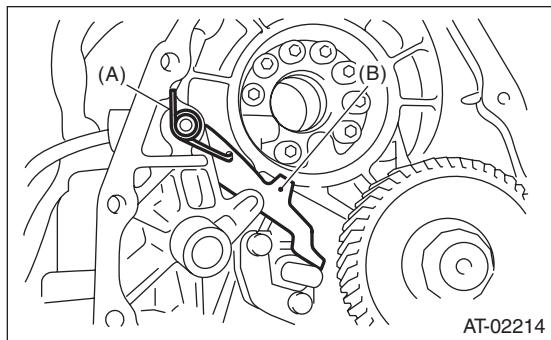

(A) Return spring
(B) Parking pawl

B: INSTALLATION

- 1) Install the parking pawl, return spring and shaft.

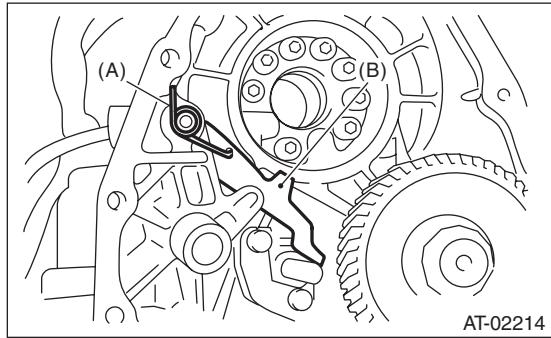

(A) Return spring
(B) Parking pawl

- 2) Install the reduction drive gear. <Ref. to 4AT-78, INSTALLATION, Reduction Drive Gear.>
- 3) Install the rear vehicle speed sensor and extension case. <Ref. to 4AT-69, INSTALLATION, Extension Case.>
- 4) Install the transmission assembly to the vehicle. <Ref. to 4AT-37, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Check that the parking pawl tab on the reduction gear is not worn or otherwise damaged.