

General Diagnostic Table

CONTROL SYSTEMS

8. General Diagnostic Table

A: INSPECTION

Symptoms	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Back-up light does not illuminate.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	AT shift lock system does not operate normally.	Adjust the select cable and inhibitor switch, or inspect the circuit.
	Manual mode can not be set.	Inspect the mode switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

AUTOMATIC TRANSMISSION

4AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	26
3. Differential Gear Oil	28
4. Road Test	29
5. Stall Test	30
6. Time Lag Test	31
7. Line Pressure Test	32
8. Transfer Clutch Pressure Test	33
9. Automatic Transmission Assembly	34
10. Transmission Mounting System	42
11. Extension Case Oil Seal	44
12. Differential Side Retainer Oil Seal	45
13. Inhibitor Switch	46
14. Front Vehicle Speed Sensor	49
15. Rear Vehicle Speed Sensor	52
16. Torque Converter Turbine Speed Sensor	53
17. Control Valve Strainer	54
18. Control Valve Body	56
19. Air Bleeding of Control Valve	59
20. Transmission Control Module (TCM)	61
21. ATF Cooler Pipe and Hose	62
22. Air Breather Hose	64
23. Oil Charge Pipe	65
24. Torque Converter Clutch Assembly	66
25. Drive Plate	68
26. Extension Case	69
27. Transfer Clutch	71
28. Reduction Driven Gear	76
29. Reduction Drive Gear	78
30. Parking Pawl	80
31. Converter Case	81
32. Oil Pump Housing	83
33. Drive Pinion Shaft Assembly	89
34. Front Differential Assembly	94
35. AT Main Case	100
36. Transmission Control Device	122