


Harness Components Location

WIRING SYSTEM

51.Harness Components Location

A: LOCATION


1. 4 DOOR MODEL

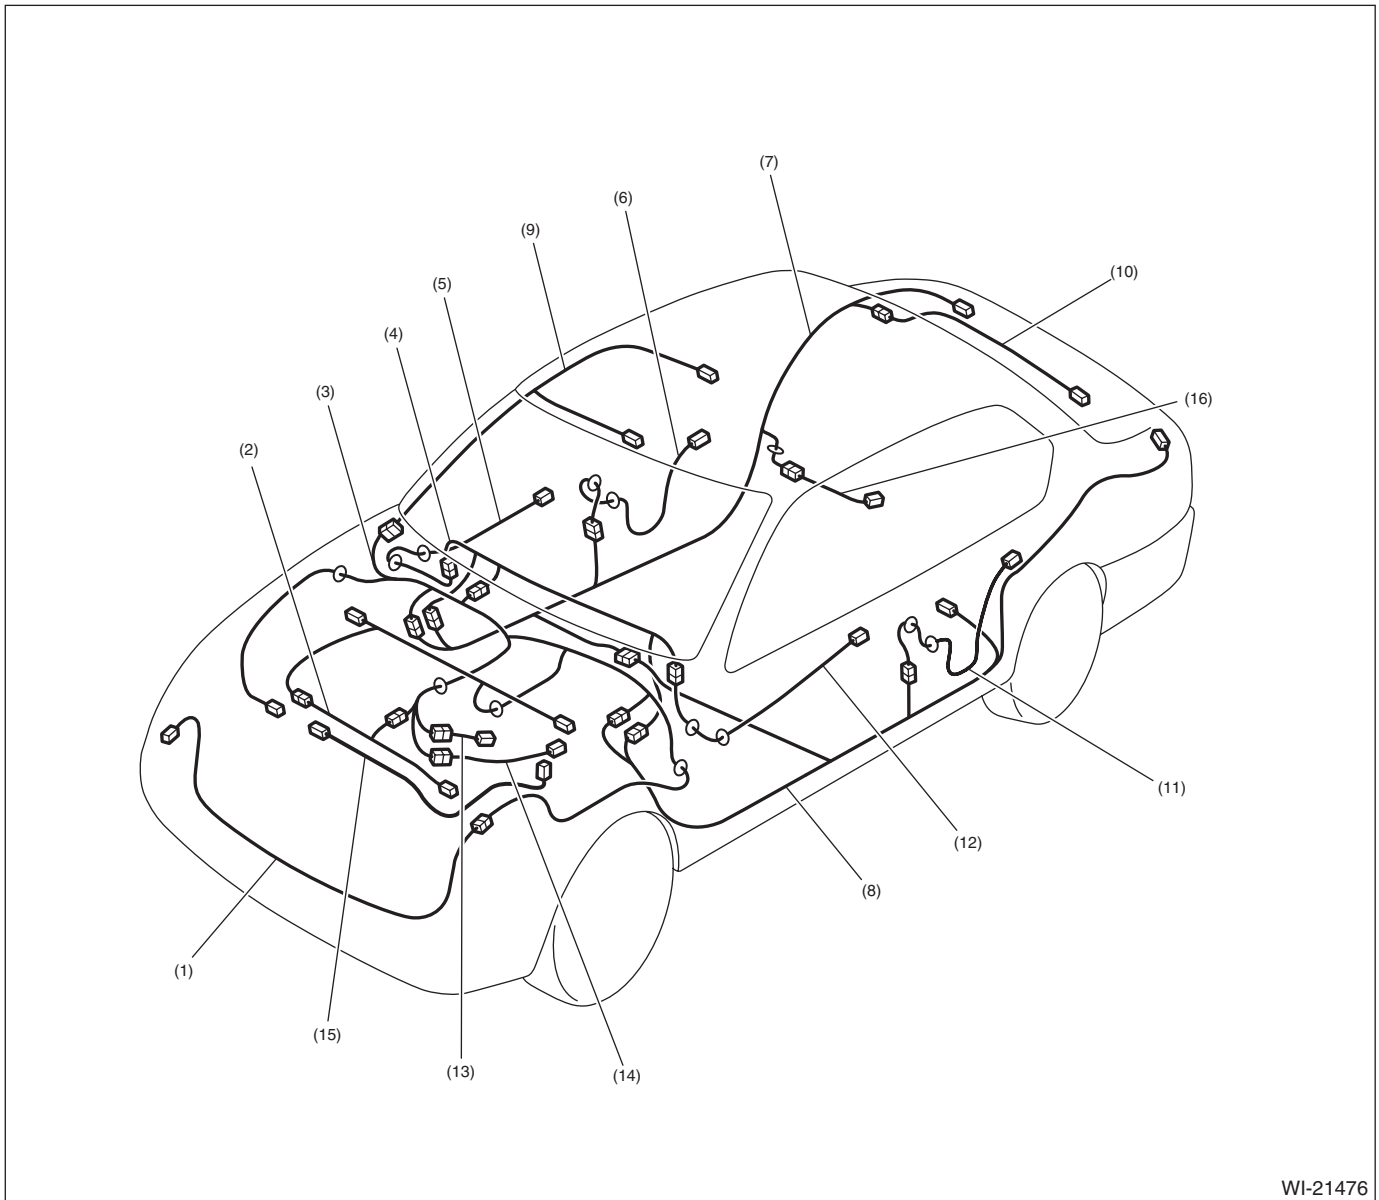

WI-21476

- | | | |
|-------------------------------------|----------------------------|------------------------------|
| (1) Front wiring harness | (7) Rear wiring harness RH | (12) Front door cord LH |
| (2) Engine wiring harness | (8) Rear wiring harness LH | (13) Transmission cord |
| (3) Bulkhead wiring harness | (9) Roof cord | (14) Rear oxygen sensor cord |
| (4) Instrument panel wiring harness | (10) Trunk lid cord | (15) Generator cord |
| (5) Front door cord RH | (11) Rear door cord LH | (16) Fuel cord |
| (6) Rear door cord RH | | |

2. 5 DOOR MODEL

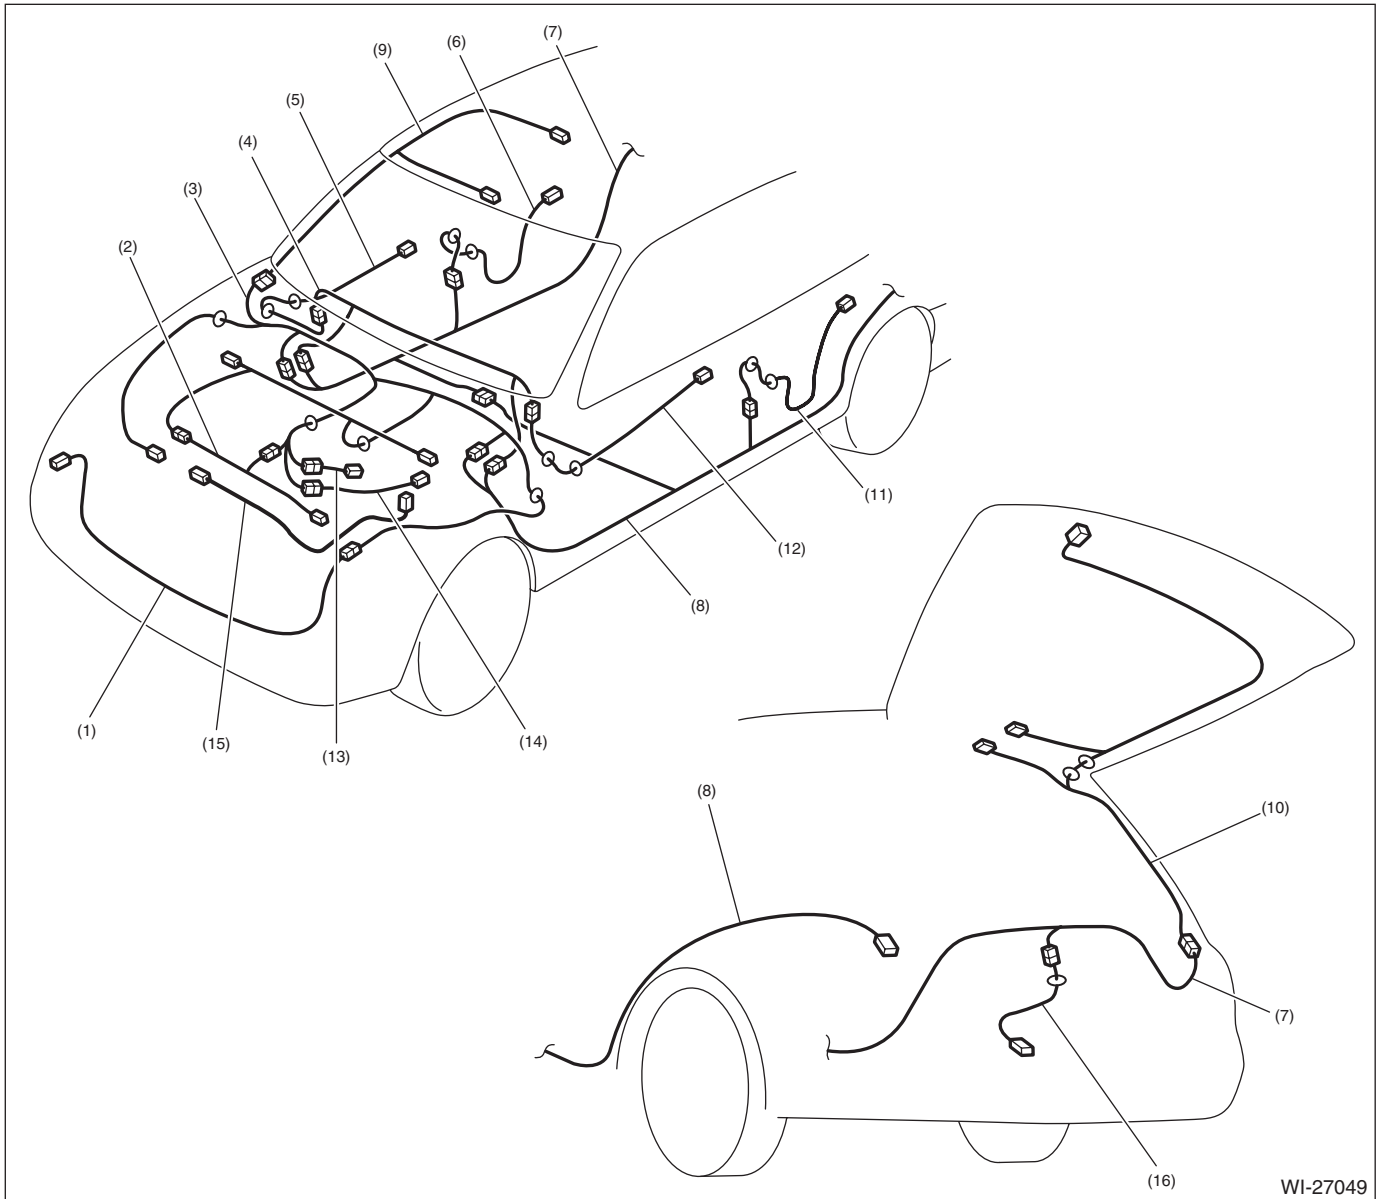

WI-27049

- | | | |
|-------------------------------------|----------------------------|------------------------------|
| (1) Front wiring harness | (7) Rear wiring harness RH | (12) Front door cord LH |
| (2) Engine wiring harness | (8) Rear wiring harness LH | (13) Transmission cord |
| (3) Bulkhead wiring harness | (9) Roof cord | (14) Rear oxygen sensor cord |
| (4) Instrument panel wiring harness | (10) Rear gate cord | (15) Generator cord |
| (5) Front door cord RH | (11) Rear door cord LH | (16) Fuel cord |
| (6) Rear door cord RH | | |