


11.Curtain Airbag Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the rear seat. <Ref. to SE-13, REMOVAL, Rear Seat.>
- 4) Remove the nuts and then remove the curtain airbag sensor.

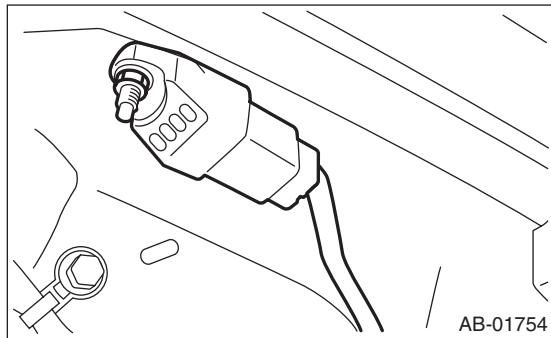

- 5) Disconnect the airbag connector.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
Always replace with the specified new bolts and nuts.
- When installing the sensor, insert the set pin on the backside of the sensor into the hole on the body side securely.

Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Curtain airbag sensor or connector is damaged.
- Curtain airbag has been activated.