

### 10. Clear Memory Mode

#### A: OPERATION

- Clear the memory in the following steps after the malfunction is repaired.
- For details concerning DTC clear operation, refer to "Subaru Select Monitor". <Ref. to AB(diag)-26, Subaru Select Monitor.>