

# List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

## 13. List of Diagnostic Trouble Code (DTC)

### A: LIST

DTC	Display	Content of diagnosis	Reference
11	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to ground.</li> <li>• Airbag module harness (driver's side) circuit is shorted to ground.</li> <li>• Roll connector circuit is shorted to ground.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-48, DTC 11 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
12	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to ground.</li> <li>• Airbag module harness (passenger's side) circuit is shorted to ground.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-51, DTC 12 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
15	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to power supply.</li> <li>• Airbag module harness circuit (driver's side) is shorted to power supply.</li> <li>• Roll connector is shorted to power supply.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-53, DTC 15 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
16	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to power supply.</li> <li>• Airbag module harness (passenger's side) circuit is shorted to power supply.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-56, DTC 16 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1A	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted.</li> <li>• Airbag module harness (driver's side) circuit is shorted.</li> <li>• Roll connector circuit is shorted.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-58, DTC 1A DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1B	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted.</li> <li>• Airbag module harness circuit (passenger's side) is shorted.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-61, DTC 1B PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1D	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is open.</li> <li>• Airbag module harness circuit (driver's side) is open.</li> <li>• Roll connector circuit is open.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-63, DTC 1D DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1E	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is open.</li> <li>• Airbag module harness circuit (passenger's side) is open.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-66, DTC 1E PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
21	Airbag ECU failure	Airbag control module is faulty.	<Ref. to AB(diag)-68, DTC 21 AIRBAG ECM FAILURE, Diagnostic Chart with Trouble Code.>

## List of Diagnostic Trouble Code (DTC)

### AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
22	Front Airbag: Firing output	Front airbag module and seat belt pretensioner (LH/RH) are inflated.	<Ref. to AB(diag)-68, DTC 22 FRONT AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code.>
26	Passenger's Airbag Indicator Failure	<ul style="list-style-type: none"> <li>• Passenger's airbag indicator is faulty.</li> <li>• Airbag control module is faulty.</li> <li>• Airbag main harness circuit is open, shorted or shorted to ground.</li> <li>• Body harness circuit is open.</li> </ul>	<Ref. to AB(diag)-69, DTC 26 PASSENGER'S AIRBAG INDICATOR FAILURE, Diagnostic Chart with Trouble Code.>
27	ODS Communication Error	<ul style="list-style-type: none"> <li>• Occupant detection control module communication is faulty.</li> <li>• Airbag rear harness circuit is open, shorted, shorted to ground or shorted to power supply.</li> <li>• Occupant detection harness is faulty.</li> <li>• Airbag control module is faulty.</li> <li>• Occupant detection system is faulty.</li> </ul>	<Ref. to AB(diag)-71, DTC 27 ODS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
29	ODS Failure	<ul style="list-style-type: none"> <li>• Occupant detection sensor is faulty.</li> <li>• Occupant detection control module is faulty.</li> <li>• Occupant detection harness is faulty.</li> <li>• Fuse is blown.</li> </ul>	<Ref. to OD(diag)-25, DTC 29 ODS FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2A	ODS Calibration Error	<ul style="list-style-type: none"> <li>• Occupant detection control module is faulty.</li> <li>• Calibration of occupant detection control module is initial setting or faulty.</li> </ul>	<Ref. to OD(diag)-22, DTC 2A ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2B	ODS System Wrong Parts	<ul style="list-style-type: none"> <li>• Specification of occupant detection control module is improper.</li> <li>• Occupant detection control module is faulty.</li> </ul>	<Ref. to OD(diag)-22, DTC 2B ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2C	Belt Tension Sensor Failure	<ul style="list-style-type: none"> <li>• Passenger's seat belt tension sensor is faulty.</li> <li>• Airbag rear harness circuit is open or shorted.</li> <li>• Occupant detection system is faulty.</li> <li>• Occupant detection harness is faulty.</li> </ul>	<Ref. to OD(diag)-23, DTC 2C BELT TENSION SENSOR FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2D	Airbag Warning Indicator Failure	<ul style="list-style-type: none"> <li>• Airbag warning light is faulty.</li> <li>• Open or short circuit in harness between airbag control module and airbag warning light.</li> <li>• Poor contact of airbag main harness and instrument panel harness.</li> <li>• Ground circuit is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-73, DTC 2D AIRBAG WARNING INDICATOR FAILURE, Diagnostic Chart with Trouble Code.>
33	Front Sub Sensor RH failure	Front sub sensor (RH) is faulty.	<Ref. to AB(diag)-73, DTC 33 FRONT SUB SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
34	Front Sub Sensor LH failure	Front sub sensor (LH) is faulty.	<Ref. to AB(diag)-73, DTC 34 FRONT SUB SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>

# List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
37	Buckle Switch RH Failure	<ul style="list-style-type: none"> <li>Passenger's buckle switch circuit is open, shorted or shorted to ground.</li> <li>Occupant detection system is faulty.</li> <li>Occupant detection harness is faulty.</li> </ul>	<Ref. to OD(diag)-26, DTC 37 BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
39	Seat Belt Warning Failure	<ul style="list-style-type: none"> <li>Airbag control module is faulty.</li> <li>Body integrated unit is faulty.</li> <li>Harness circuits between body integrated unit and airbag control module are open, shorted or shorted to ground.</li> </ul>	<Ref. to AB(diag)-74, DTC 39 SEAT BELT WARNING FAILURE, Diagnostic Chart with Trouble Code.>
3A	Front Sub Sensor RH false installation	<ul style="list-style-type: none"> <li>Front sensor (RH) is misinstalled.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-76, DTC 3A FRONT SUB SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
3B	Front Sub Sensor LH false installation	<ul style="list-style-type: none"> <li>Front sensor (LH) is misinstalled.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-76, DTC 3B FRONT SUB SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
3C	Satellite Sensor Bus failure	Satellite safing sensor is faulty.	<Ref. to AB(diag)-76, DTC 3C SATELLITE SENSOR BUS FAILURE, Diagnostic Chart with Trouble Code.>
3D	Satellite Sensor false installation	<ul style="list-style-type: none"> <li>Satellite safing sensor is misinstalled.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-76, DTC 3D SATELLITE SENSOR FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
41	Side Airbag RH failure	<ul style="list-style-type: none"> <li>Side airbag harness (RH) circuit is shorted to ground.</li> <li>Side airbag module (RH) is faulty.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-77, DTC 41 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>
42	Side Airbag LH failure	<ul style="list-style-type: none"> <li>Side airbag harness (LH) circuit is shorted to ground.</li> <li>Side airbag module (LH) is faulty.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-79, DTC 42 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
45	Side Airbag RH failure	<ul style="list-style-type: none"> <li>Side airbag harness (RH) circuit is shorted to power supply.</li> <li>Side airbag module (RH) is faulty.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-81, DTC 45 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>
46	Side Airbag LH failure	<ul style="list-style-type: none"> <li>Side airbag harness (LH) circuit is shorted to power supply.</li> <li>Side airbag module (LH) is faulty.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-83, DTC 46 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
4A	Side Airbag RH failure	<ul style="list-style-type: none"> <li>Side airbag harness (RH) circuit is shorted.</li> <li>Side airbag module (RH) is faulty.</li> <li>Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-85, DTC 4A SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>

## List of Diagnostic Trouble Code (DTC)

### AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
4B	Side Airbag LH failure	<ul style="list-style-type: none"> <li>• Side airbag harness (LH) circuit is shorted.</li> <li>• Side airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-87, DTC 4B SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
4D	Side Airbag RH failure	<ul style="list-style-type: none"> <li>• Side airbag harness (RH) circuit is open.</li> <li>• Side airbag module (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-89, DTC 4D SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>
4E	Side Airbag LH failure	<ul style="list-style-type: none"> <li>• Side airbag harness (LH) circuit is open.</li> <li>• Side airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-91, DTC 4E SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
53	Side Airbag Sensor RH failure	Side airbag sensor (RH) is faulty.	<Ref. to AB(diag)-93, DTC 53 SIDE AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
54	Side Airbag Sensor LH failure	Side airbag sensor (LH) is faulty.	<Ref. to AB(diag)-93, DTC 54 SIDE AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
55	Side/Curtain Airbag: Firing output	<ul style="list-style-type: none"> <li>• Side airbag module and curtain airbag module are deployed.</li> <li>• Curtain airbag module is deployed.</li> </ul>	<Ref. to AB(diag)-93, DTC 55 SIDE CURTAIN AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code.>
58	Curtain Airbag Sensor RH failure	Curtain airbag sensor (RH) is faulty.	<Ref. to AB(diag)-93, DTC 58 CURTAIN AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
59	Curtain Airbag Sensor LH failure	Curtain airbag sensor (LH) is faulty.	<Ref. to AB(diag)-93, DTC 59 CURTAIN AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
5A	Side Airbag Sensor RH false installation	<ul style="list-style-type: none"> <li>• Side airbag sensor (RH) is misinstalled.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-94, DTC 5A SIDE AIRBAG SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
5B	Side Airbag Sensor LH false installation	<ul style="list-style-type: none"> <li>• Side airbag sensor (LH) is misinstalled.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-94, DTC 5B SIDE AIRBAG SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
5C	Curtain Airbag Sensor RH false installation	<ul style="list-style-type: none"> <li>• Curtain airbag sensor (RH) is misinstalled.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-94, DTC 5C CURTAIN AIRBAG SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>

# List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
5D	Curtain Airbag Sensor LH false installation	<ul style="list-style-type: none"> <li>• Curtain airbag sensor (LH) is misinstalled.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-94, DTC 5D CURTAIN AIRBAG SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
61	Belt Pretensioner RH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (RH) circuit is shorted to ground.</li> <li>• Pretensioner (RH) is faulty.</li> <li>• Pretensioner harness (RH) is shorted to ground.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-95, DTC 61 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
62	Belt Pretensioner LH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (LH) circuit is shorted to ground.</li> <li>• Pretensioner (LH) is faulty.</li> <li>• Pretensioner harness (LH) is shorted to ground.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-97, DTC 62 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
65	Belt Pretensioner RH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (RH) circuit is shorted to power supply.</li> <li>• Pretensioner (RH) is faulty.</li> <li>• Pretensioner harness (RH) is shorted to power supply.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-99, DTC 65 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
66	Belt Pretensioner LH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (LH) circuit is shorted to power supply.</li> <li>• Pretensioner (LH) is faulty.</li> <li>• Pretensioner harness (LH) is shorted to power supply.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-101, DTC 66 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
6A	Belt Pretensioner RH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (RH) circuit is shorted.</li> <li>• Pretensioner (RH) is faulty.</li> <li>• Pretensioner harness (RH) is shorted.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-103, DTC 6A BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
6B	Belt Pretensioner LH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (LH) circuit is shorted.</li> <li>• Pretensioner (LH) is faulty.</li> <li>• Pretensioner harness (LH) is shorted.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-105, DTC 6B BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
6D	Belt Pretensioner RH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (RH) circuit is open.</li> <li>• Pretensioner (RH) is faulty.</li> <li>• Pretensioner harness (RH) is open.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-107, DTC 6D BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
6E	Belt Pretensioner LH failure	<ul style="list-style-type: none"> <li>• Seat belt pretensioner (LH) circuit is open.</li> <li>• Pretensioner harness (LH) is open.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-109, DTC 6E BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
71	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to ground.</li> <li>• Airbag module harness (driver's side) circuit is shorted to ground.</li> <li>• Roll connector circuit is shorted to ground.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-111, DTC 71 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
72	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to ground.</li> <li>• Airbag module harness (passenger's side) circuit is shorted to ground.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-114, DTC 72 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>

## List of Diagnostic Trouble Code (DTC)

### AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
75	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to power supply.</li> <li>• Airbag module harness circuit (driver's side) is shorted to power supply.</li> <li>• Roll connector circuit is shorted to power supply.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-116, DTC 75 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
76	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted to power supply.</li> <li>• Airbag module harness (passenger's side) circuit is shorted to power supply.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-119, DTC 76 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7A	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted.</li> <li>• Airbag module harness (driver's side) circuit is shorted.</li> <li>• Roll connector circuit is shorted to power supply.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-121, DTC 7A DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7B	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is shorted.</li> <li>• Airbag module harness circuit (passenger's side) is shorted.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-124, DTC 7B PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7D	Driver's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is open.</li> <li>• Airbag module harness circuit (driver's side) is open.</li> <li>• Roll connector circuit is open.</li> <li>• Driver's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-126, DTC 7D DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7E	Passenger's Airbag failure	<ul style="list-style-type: none"> <li>• Airbag main harness circuit is open.</li> <li>• Airbag module harness circuit (passenger's side) is open.</li> <li>• Passenger's airbag module is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-129, DTC 7E PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
91	Curtain Airbag Module RH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (RH) circuit is shorted to ground.</li> <li>• Curtain airbag module (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-131, DTC 91 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
92	Curtain Airbag Module LH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (LH) circuit is shorted to ground.</li> <li>• Curtain airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-133, DTC 92 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
95	Curtain Airbag Module RH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (RH) is shorted to power supply.</li> <li>• Curtain airbag module (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-135, DTC 95 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
96	Curtain Airbag Module LH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (LH) is shorted to power supply.</li> <li>• Curtain airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-137, DTC 96 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>

# List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
9A	Curtain Airbag Module RH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (RH) circuit is shorted.</li> <li>• Curtain airbag module (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-139, DTC 9A CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
9B	Curtain Airbag Module LH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (LH) circuit is shorted.</li> <li>• Curtain airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-141, DTC 9B CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
9D	Curtain Airbag Module RH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (RH) circuit is open.</li> <li>• Curtain airbag module (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-143, DTC 9D CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
9E	Curtain Airbag Module LH Failure	<ul style="list-style-type: none"> <li>• Curtain airbag harness (LH) circuit is open.</li> <li>• Curtain airbag module (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-145, DTC 9E CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
A1	Front Sensor Bus Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness between airbag control module and front sub sensor.</li> <li>• Front sub sensor is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-147, DTC A1 FRONT SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E3 E4	Front Sensor Bus RH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (RH) between airbag control module and front sub sensor.</li> <li>• Front sub sensor (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-149, DTC E3 FRONT SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-149, DTC E4 FRONT SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E7 E8	Front Sensor Bus LH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (LH) between airbag control module and front sub sensor.</li> <li>• Front sub sensor (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-150, DTC E7 FRONT SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-152, DTC E8 FRONT SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E9	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (RH) between airbag control module and curtain airbag sensor.</li> <li>• Side airbag sensor (RH) is faulty.</li> <li>• Curtain airbag sensor (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<Ref. to AB(diag)-152, DTC E9 SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>

## List of Diagnostic Trouble Code (DTC)

### AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
EB EC	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (RH) between airbag control module and side airbag sensor.</li> <li>• Side airbag sensor (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<p>&lt;Ref. to AB(diag)-152, DTC EB SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt; &lt;Ref. to AB(diag)-153, DTC EC SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p>
ED EE	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (RH) between airbag control module and curtain airbag sensor.</li> <li>• Side airbag sensor (RH) is faulty.</li> <li>• Curtain airbag sensor (RH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<p>&lt;Ref. to AB(diag)-155, DTC ED SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p> <p>&lt;Ref. to AB(diag)-156, DTC EE SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p>
F1	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (LH) between airbag control module and curtain airbag sensor.</li> <li>• Side airbag sensor (LH) is faulty.</li> <li>• Curtain airbag sensor (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<p>&lt;Ref. to AB(diag)-159, DTC F1 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p>
F3 F4	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (LH) between airbag control module and side airbag sensor.</li> <li>• Side airbag sensor (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<p>&lt;Ref. to AB(diag)-159, DTC F3 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt; &lt;Ref. to AB(diag)-160, DTC F4 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p>
F5 F6	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> <li>• Open or short circuit in harness (LH) between airbag control module and curtain airbag sensor.</li> <li>• Side airbag sensor (LH) is faulty.</li> <li>• Curtain airbag sensor (LH) is faulty.</li> <li>• Airbag control module is faulty.</li> </ul>	<p>&lt;Ref. to AB(diag)-162, DTC F5 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p> <p>&lt;Ref. to AB(diag)-163, DTC F6 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.&gt;</p>

## List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
F7	Satellite Sensor Bus Communication error	<ul style="list-style-type: none"><li>• Open or short circuit in harness between airbag control module and satellite safing sensor.</li></ul>	<Ref. to AB(diag)-166, DTC F7 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F8		<ul style="list-style-type: none"><li>• Satellite safing sensor is faulty.</li></ul>	<Ref. to AB(diag)-166, DTC F8 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F9		<ul style="list-style-type: none"><li>• Airbag control module is faulty.</li></ul>	<Ref. to AB(diag)-166, DTC F9 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
FA			<Ref. to AB(diag)-167, DTC FA SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>