


4. Electrical Component Location

A: LOCATION

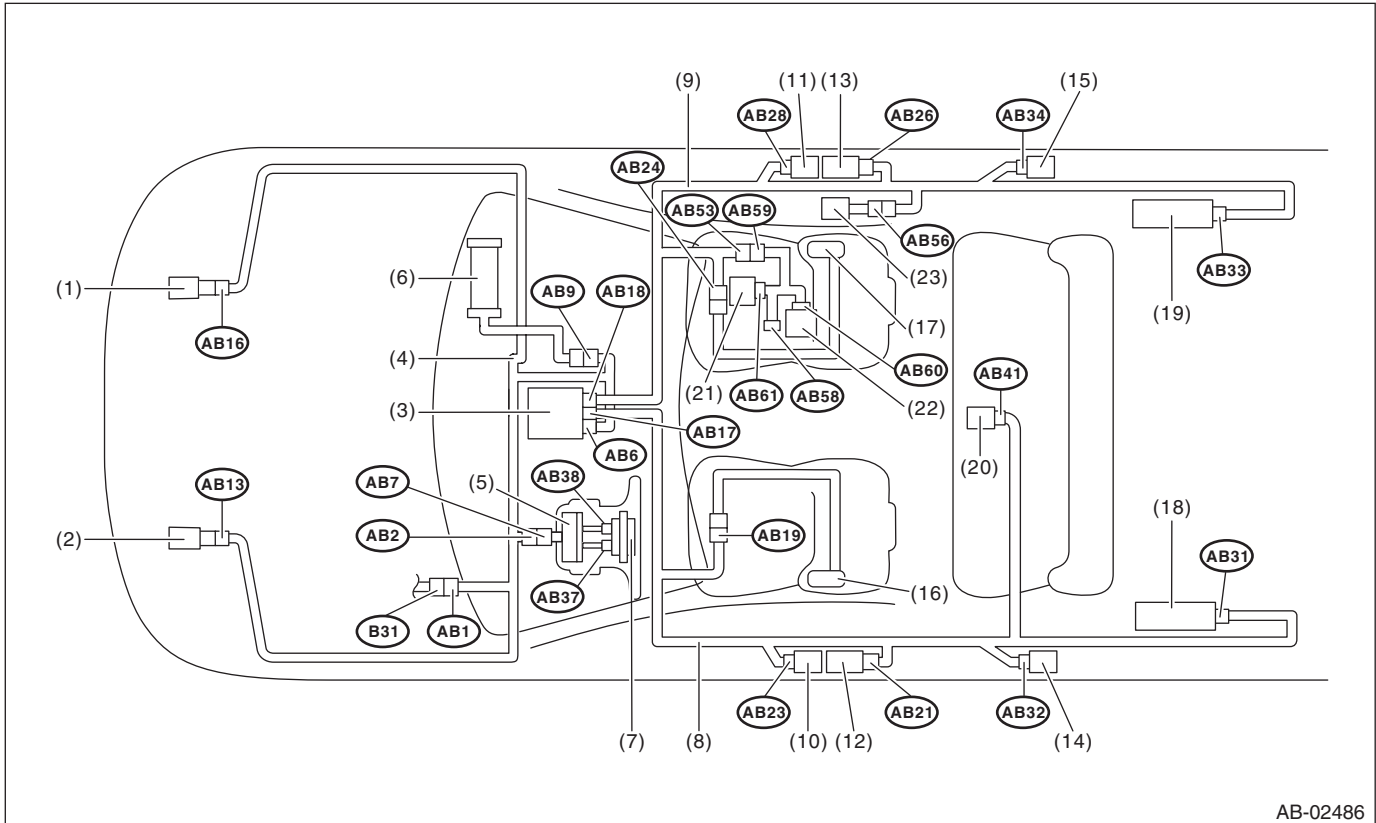

- | | | |
|--|----------------------------------|--|
| (1) Front sub sensor (RH) | (9) Airbag rear harness (RH) | (17) Side airbag inflator (RH) |
| (2) Front sub sensor (LH) | (10) Side airbag sensor (LH) | (18) Curtain airbag inflator (LH) |
| (3) Airbag control module | (11) Side airbag sensor (RH) | (19) Curtain airbag inflator (RH) |
| (4) Airbag main harness (bulkhead harness) | (12) Seat belt pretensioner (LH) | (20) Satellite safing sensor |
| (5) Roll connector | (13) Seat belt pretensioner (RH) | (21) Occupant detection control module |
| (6) Passenger's airbag inflator | (14) Curtain airbag sensor (LH) | (22) Buckle switch (RH) |
| (7) Driver's airbag inflator | (15) Curtain airbag sensor (RH) | (23) Belt tension sensor |
| (8) Airbag rear harness (LH) | (16) Side airbag inflator (LH) | |

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	6	4	30	4	4	2	2	15	15	4	2	4
Color	White	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Black	Yellow
Male/Female	Male	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB24)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)	(AB56)
Pin	4	2	4	2	4	2	4	2	2	2	6	3
Color	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Gray	Brown
Male/Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)							
Pin	3	6	2	18	3							
Color	Gray	Gray	Yellow	Black	Brown							
Male/Female	Female	Female	Female	Female	Female							