

2. Horn System


A: WIRING DIAGRAM

Refer to "Horn System" in WI section. <Ref. to WI-111, WIRING DIAGRAM, Horn System.>

B: INSPECTION

1. HORN RELAY

- 1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the horn relay terminals.

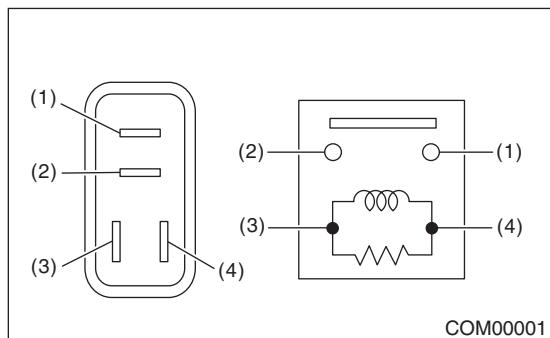

| Continuity | Terminal No. | Standard |
|------------|--------------|---------------|
| Yes | 1 and 2 | Less than 1 Ω |
| No | | 1 MΩ or more |

- 2) Replace the horn relay if it is found defective.

C: NOTE

For procedure of each component in the horn system, refer to the respective section.

- Horn assembly: <Ref. to COM-4, Horn.>
- Horn switch: <Ref. to COM-5, Horn Switch.>