

4. Horn Switch

A: REMOVAL

WARNING:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-5, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the driver's airbag module. <Ref. to AB-16, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Remove the horn switch. <Ref. to COM-5, REMOVAL, Horn Switch.>
- 2) Check the resistance between horn switch terminal and airbag module bracket.

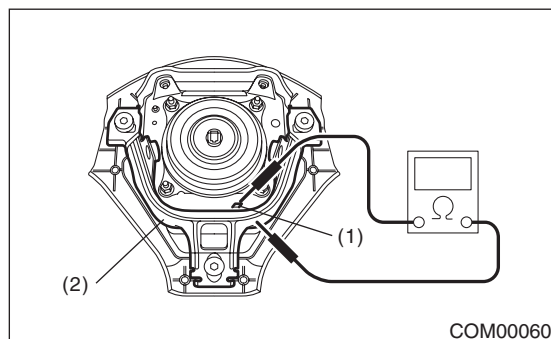

- (1) Horn switch terminal
(2) Airbag module bracket

Switch position	Terminal No.	Standard
The airbag module bracket being pushed	Horn switch terminal and airbag module bracket	Less than 1 Ω
The airbag module bracket being separated		1 M Ω or more

- 3) Replace the driver's airbag module if the inspection result is not within the standard value.

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	8
3. Power Window Control Switch	9
4. Front Door Glass	11
5. Front Regulator and Motor Assembly	12
6. Remote Control Mirror System	13
7. Scalp Cap	14
8. Outer Mirror Assembly	15
9. Outer Mirror	16
10. Remote Control Mirror Switch	17
11. Rear Door Glass	18
12. Rear Regulator and Motor Assembly	19
13. Windshield Glass	20
14. Rear Gate Glass	25
15. Rear Window Glass	28
16. Rear Window Defogger System	30
17. Rear Quarter Glass	32
18. Rearview Mirror	35
19. Wiper Deicer System	36