


General Description

CRUISE CONTROL SYSTEM

1. General Description

A: COMPONENT

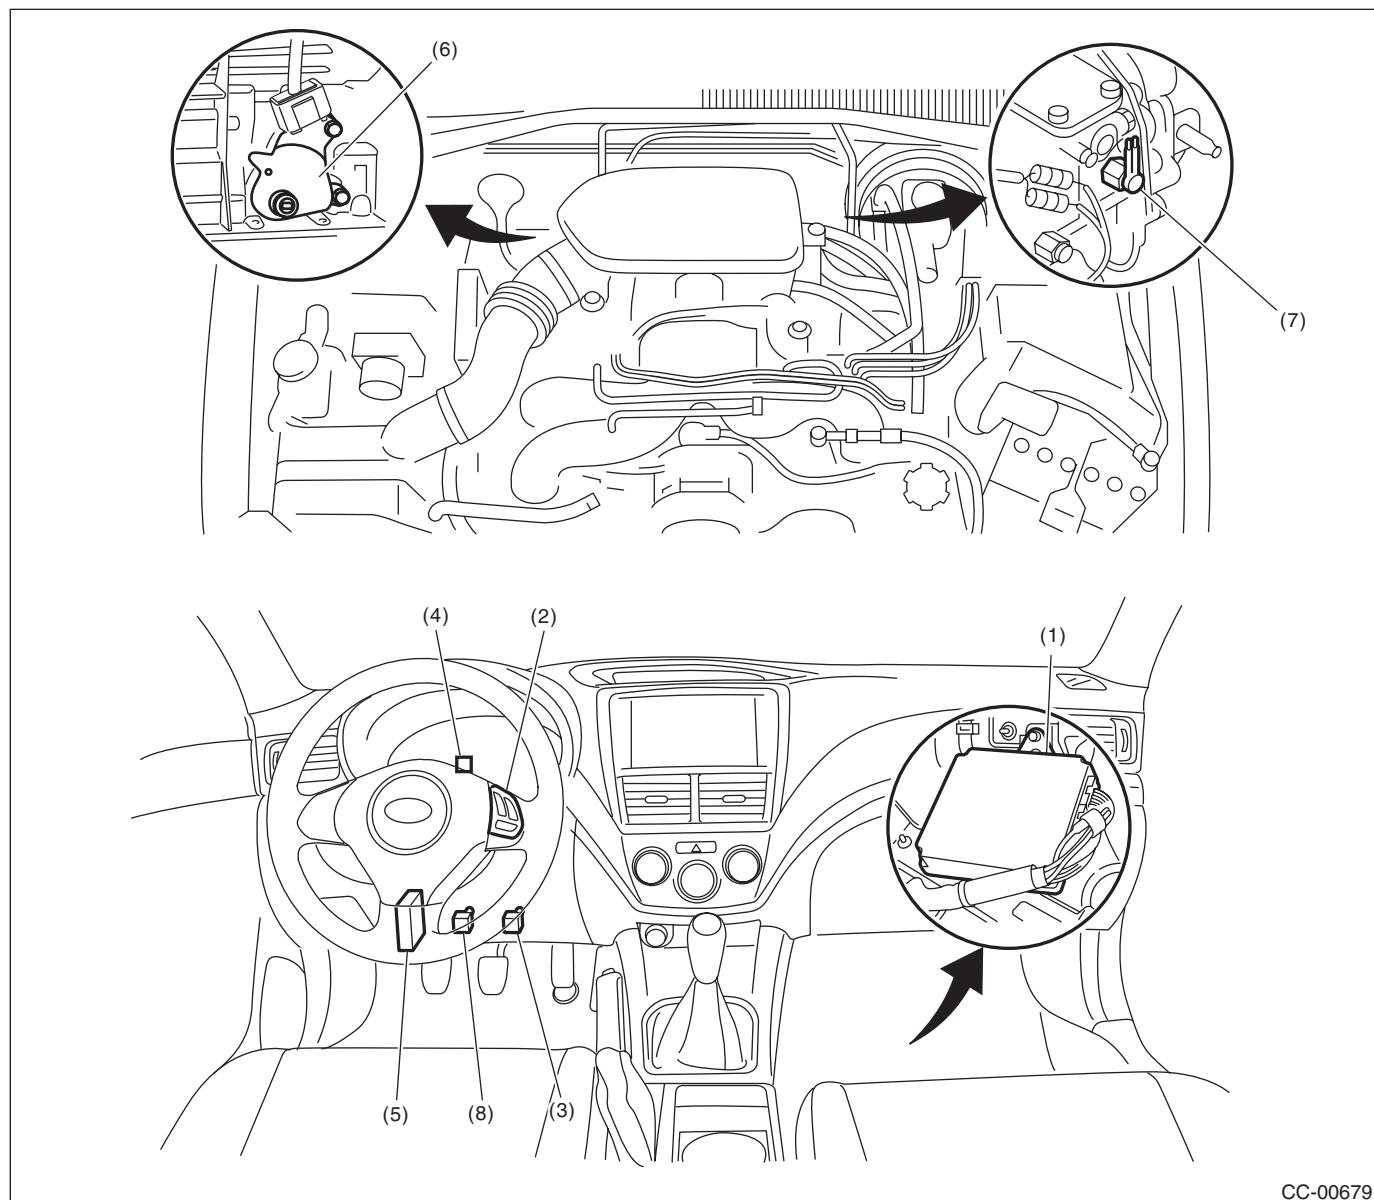

(1) Engine control module (ECM)	(4) Cruise indicator light and cruise set indicator light	(7) Neutral position switch (MT model)
(2) Cruise control command switch	(5) Transmission control module (TCM) (AT model)	(8) Clutch switch (MT model)
(3) Stop light and brake switch	(6) Inhibitor switch (AT model)	

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure that the functional parts operate normally.

C: PREPARATION TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
TORX® bit T30	Used for removing/installing driver's airbag module.