

3. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

For removal/installation procedures of the control module, refer to Engine section.

B: REMOVAL

For removal procedures of the control module, refer to Engine section. <Ref. to FU(H4SO)-46, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

For install procedures of the control module, refer to Engine section. <Ref. to FU(H4SO)-46, INSTALLATION, Engine Control Module (ECM).>