

2. Audio System

A: WIRING DIAGRAM

1. AUDIO

Refer to "Audio System" in the wiring diagram. <Ref. to WI-102, WIRING DIAGRAM, Audio System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	<ol style="list-style-type: none">1. Check the fuse and power supply for audio.2. Check the audio ground.3. Remove the audio for repair.
A specific speaker does not operate.	<ol style="list-style-type: none">1. Check the speaker.2. Check the output circuit between audio and speaker.
Audio generates noise with engine is running.	<ol style="list-style-type: none">1. Check the audio ground.2. Check the generator.3. Check the ignition coil.4. Remove the audio for repair.
Volume is low in AM and FM modes or interference noise occurs.	<ol style="list-style-type: none">1. Check the antenna.2. Check the audio ground.3. Remove the audio for repair.

C: NOTE

For procedure of each component in the audio system, refer to the respective sections.

- Audio unit: <Ref. to ET-6, Audio.>
- Front speaker: <Ref. to ET-7, Front Speaker.>
- Tweeter: <Ref. to ET-8, Tweeter.>
- Rear speaker: <Ref. to ET-9, Rear Speaker.>
- Antenna: <Ref. to ET-10, Antenna.>
- Steering satellite switch: <Ref. to ET-11, Steering Satellite Switch.>
- Steering switch: <Ref. to ET-13, Steering Switch.>