

11. Trunk Lid

A: REMOVAL


1. TORSION BAR

- 1) Open the trunk lid.
- 2) Using the ST, remove the torsion bar from the hinge link.

CAUTION:

During removal and installation, handle the torsion bar carefully, because it will generate reactive force.


Preparation tool: REMOVER (927780000)

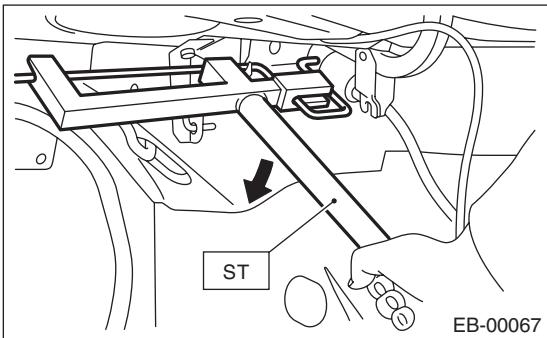

- 3) Remove the torsion bars RH/LH.


2. TRUNK LID ARM

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid to remove the trunk room trim. <Ref. to EI-59, REMOVAL, Trunk Room Trim.>
- 3) Disconnect the trunk lid release cable. <Ref. to SL-37, REMOVAL, Trunk Lid Latch and Actuator Assembly.>
- 4) Disconnect the connectors, and remove the harness clip, etc.
- 5) Remove the trunk lid mounting bolts, to remove the trunk lid panel from the trunk lid arm.

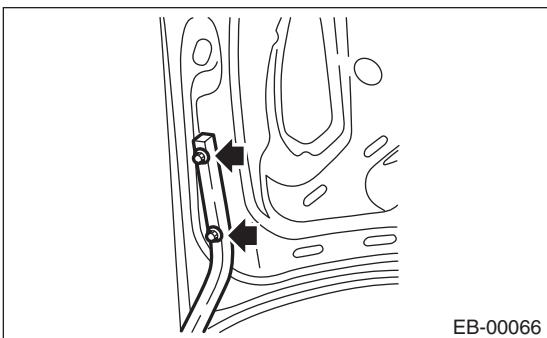


- 6) Remove the torsion bar from the trunk lid hinge link. <Ref. to EB-34, TORSION BAR, REMOVAL, Trunk Lid.>
- 7) Remove the rear shelf trim. <Ref. to EI-58, REMOVAL, Rear Shelf Trim.>

- 8) Remove the bolts, then remove the trunk lid arm.

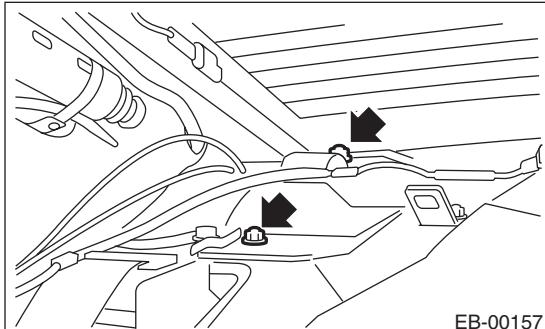

3. TRUNK LID PANEL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector to remove the trunk lid harness.
- 3) Remove the trunk lid latch and actuator assembly. <Ref. to SL-37, REMOVAL, Trunk Lid Latch and Actuator Assembly.>
- 4) Remove the trunk lid garnish. <Ref. to EI-69, REMOVAL, Trunk Lid Garnish.>
- 5) Remove the bolts, then remove the trunk lid panel from the trunk lid arm.

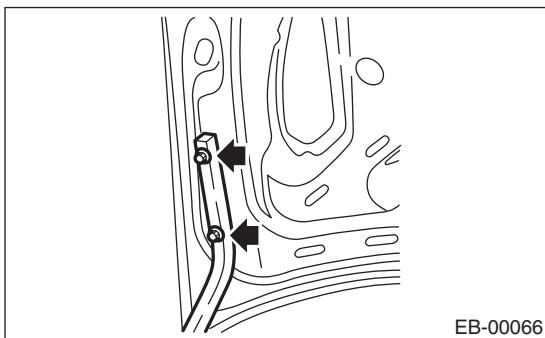

B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Apply grease to the rotating area of hinges and the torsion bar.
- 3) Install while paying attention to make a uniform clearance around the trunk lid panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>


Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to EB-10, FRONT FENDER, COMPONENT, General Description.>

C: ADJUSTMENT


For the dimension of panel around the trunk lid panel, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

- 1) Adjust the trunk lid panel lateral position.

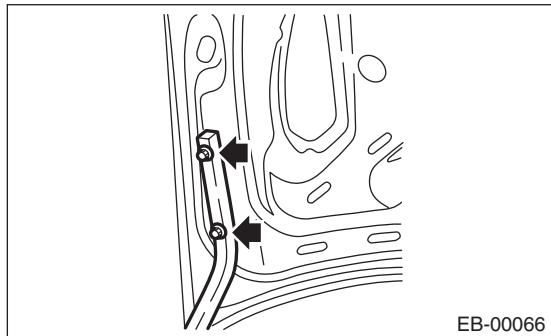

- (1) Loosen the mounting bolt.
(2) Align the trunk lid panel lateral panel dimension.

- 2) Adjust the gap between trunk lid panel and body surface.

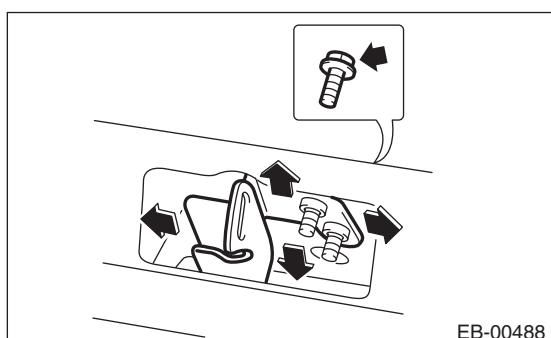

- (1) Loosen the bolt.
(2) Tap striker using plastic hammer to adjust the gap between trunk lid panel and body surface.