


## 3. Front Fender


### A: REMOVAL

#### 1. FRONT FENDER PANEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the side sill spoilers. <Ref. to EI-39, REMOVAL, Side Sill Spoiler.>
- 3) Remove the front bumper face. <Ref. to EI-27, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the headlight assembly. <Ref. to LI-14, REMOVAL, Headlight Assembly.>
- 5) Remove the mud guard. <Ref. to EI-26, REMOVAL, Mud Guard.>
- 6) Detach the tabs and remove the cowl panel side.

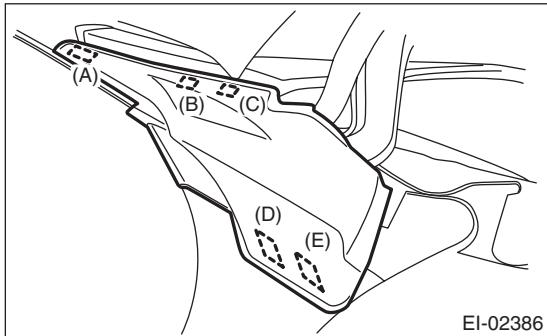

- (1) Detach tabs (A), (B), and (C) from the vehicle exterior.
- (2) Detach tabs (D) and (E).
- 7) Remove the bolt, and remove the front fender panel.

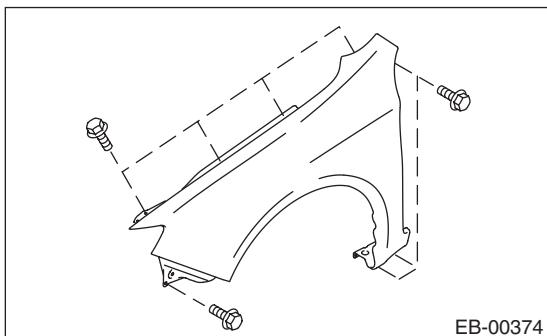

#### 2. COWL SIDE STAY

For operation procedures, refer to performance stay items. <Ref. to EB-19, REMOVAL, Front Performance Stay.>

### B: INSTALLATION

#### CAUTION:

After the installation of front fender panel, be sure to perform headlight beam adjustment. Install each part in the reverse order of removal.

#### Tightening torque:

$7.5 \text{ N}\cdot\text{m} (0.76 \text{ kgf}\cdot\text{m}, 5.5 \text{ ft-lb})$

#### NOTE:

Install while paying attention to make a uniform clearance around the front fender panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>