


4. Front Performance Stay

A: REMOVAL

- 1) Remove the front fender. <Ref. to EB-18, REMOVAL, Front Fender.>
- 2) Remove the bolts and harness clip, and remove the front performance stay.

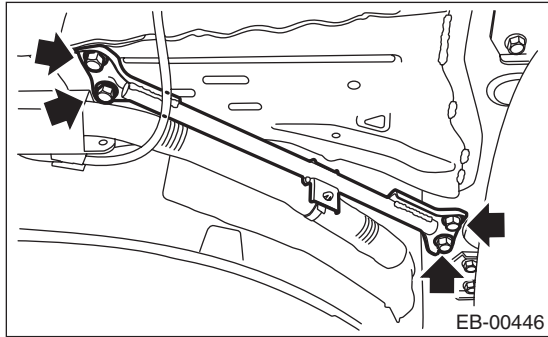

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

70 N·m (7.14 kgf-m, 51.6 ft-lb)