


## 10. Rear Spoiler

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Remove the high mount stop light connector (A).
- 4) Remove the rear spoiler attachment nut (B) and clip (C), and remove the rear spoiler.

#### CAUTION:

- When removing the nut, be careful not to drop the nut inside the trunk lid panel.
- Be careful not to cause damage during removal and installation.

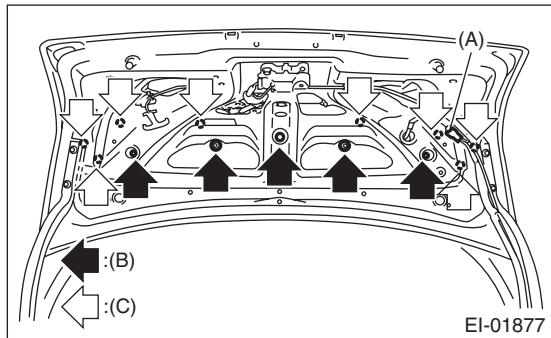

### B: INSTALLATION

#### CAUTION:

Improper installing may cause the water leakage, make sure the harness grommet is installed securely.

- 1) Install each part in the reverse order of removal.
- 2) Clean the trunk lid and spoiler attachment surface before installation.

#### *Tightening torque:*

**7.5 N·m (0.76 kgf·m, 5.5 ft-lb)**