


11.Side Sill Spoiler

A: REMOVAL

Remove the clips and detach the side spoiler.

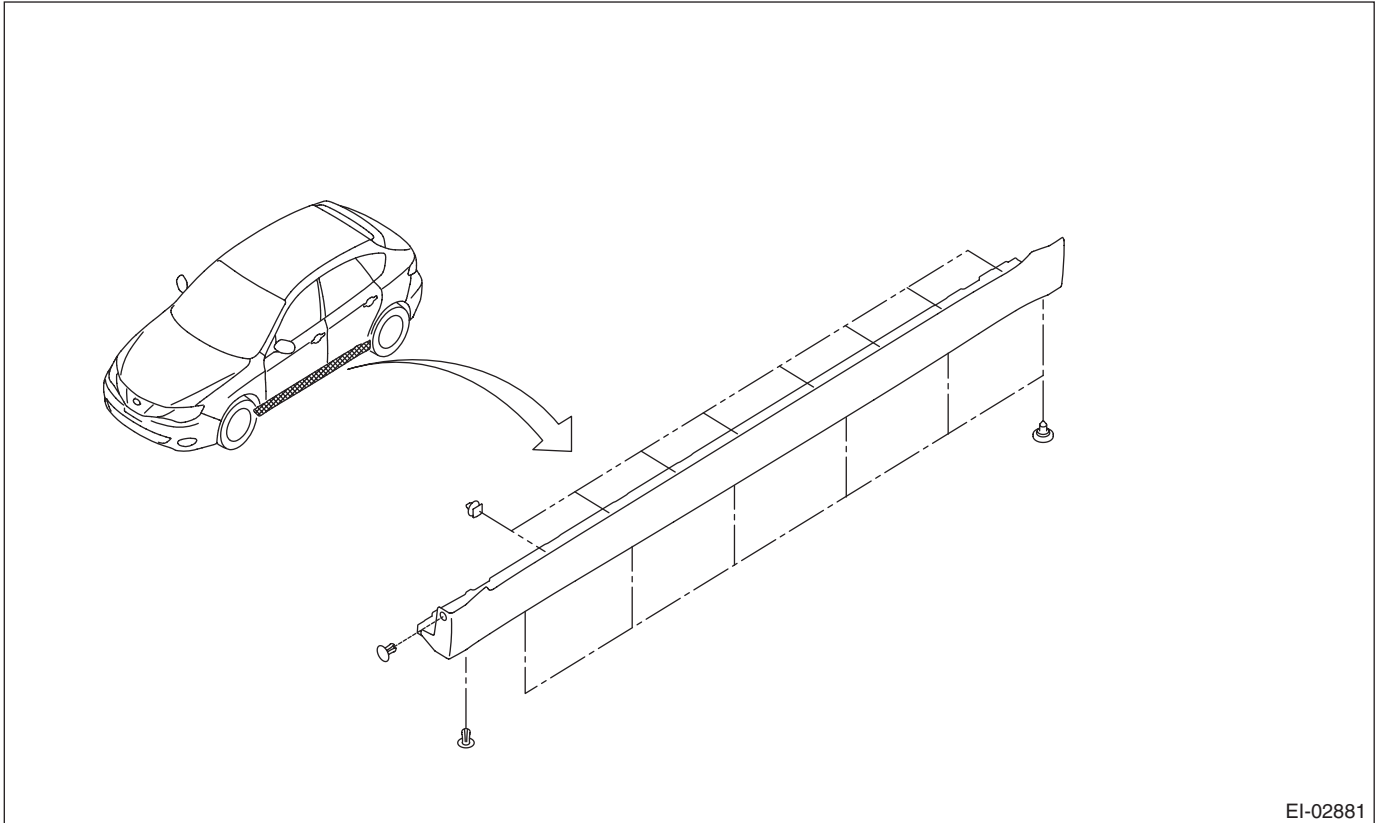


EI-02881

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

For the rearmost clip securing the side sill spoiler, install through the air flap.

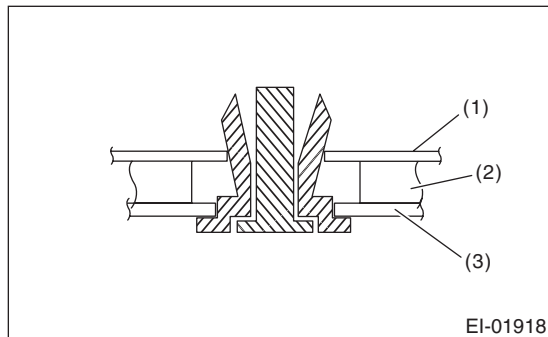

EI-01918

- (1) Side sill spoiler ASSY
- (2) Air flap
- (3) Side sill spoiler