



22.Rear Shelf Trim

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim. <Ref. to EI-56, 4 DOOR MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the seat belt center anchor lower bolt.

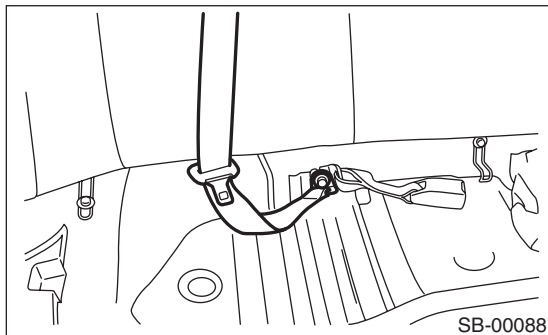

- 4) Remove the clips, and remove the rear shelf trim.

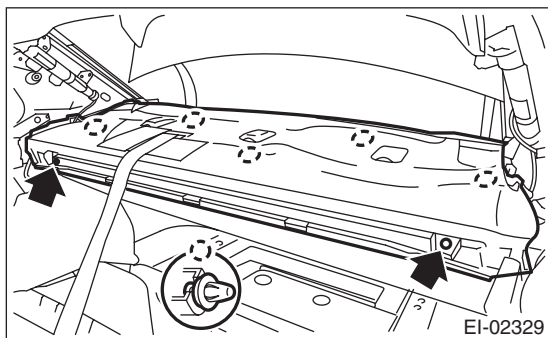

B: INSTALLATION

Install each part in the reverse order of removal.