



23. Trunk Room Trim

A: REMOVAL

- 1) Remove the rear seat backrest. <Ref. to SE-13, REMOVAL, Rear Seat.>
- 2) Remove the trunk room mat.
- 3) Remove the clips, and then remove the trunk room rear trim.

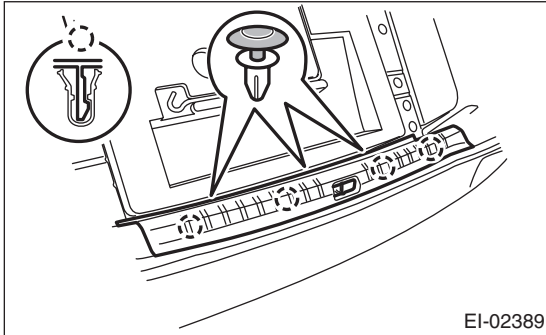

- 4) Remove the clips, and remove the trunk side trim.

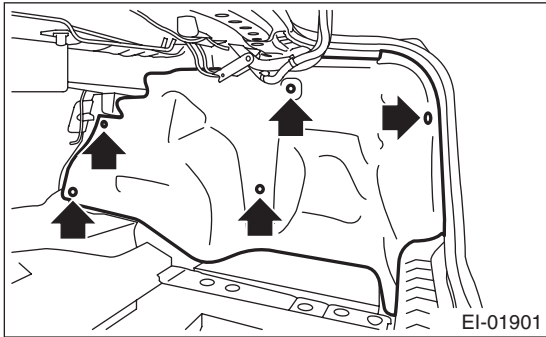

B: INSTALLATION

Install each part in the reverse order of removal.