



3. Front Under Cover

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove clips (A) in front fender and bolts (B), then remove the front under cover.

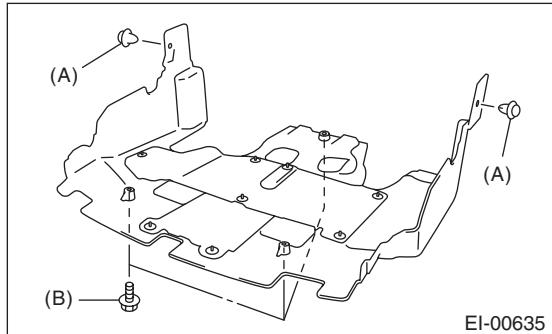

EI-00635

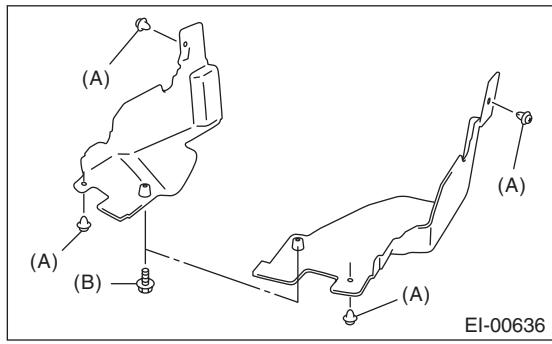

EI-00636

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

18 N·m (1.84 kgf·m, 13.3 ft-lb)