


### 31. Heat Shield Cover

#### A: REMOVAL

##### 1. FRONT HEAT SHIELD COVER


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from oxygen (A/F) sensor. <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
- 3) Remove the exhaust pipe. <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.>
- 4) Remove the four bolts to remove the front heat shield cover.

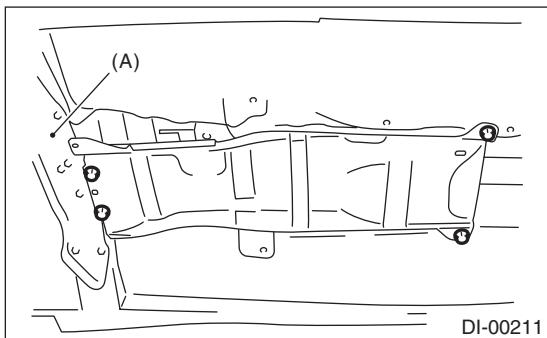


(A) Transmission mount

##### 2. CENTER HEAT SHIELD COVER

- 1) Remove the rear exhaust pipe. <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.>
- 2) Remove the bolt (A), nut (B) and clip (C) to remove center heat shield cover.

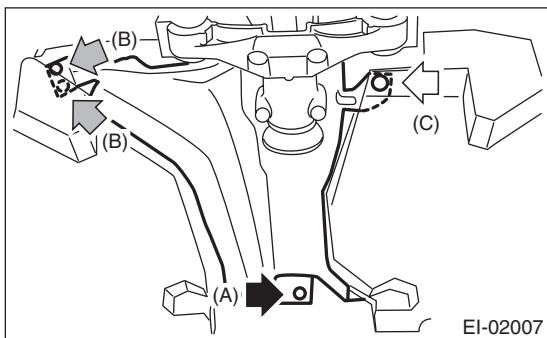

EI-02007

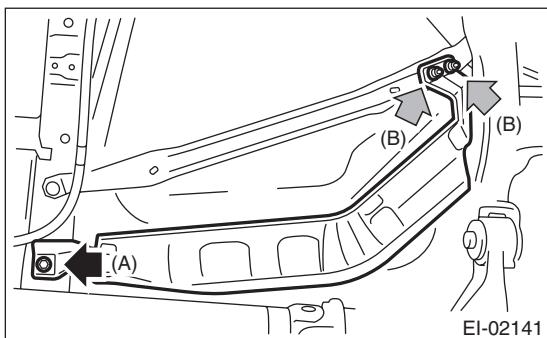


EI-02141

##### 3. REAR HEAT SHIELD COVER

- 1) Remove the muffler. <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>


- 2) Remove the bolts, and remove the rear heat shield cover.

- 5 door model

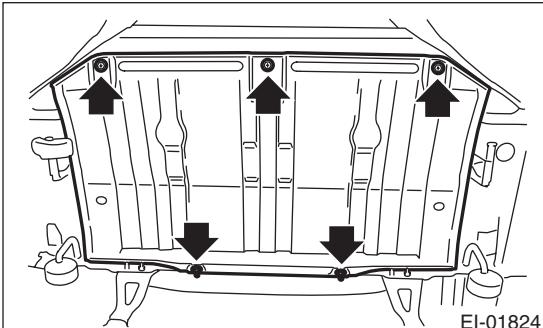

EI-01824

- 4 door model

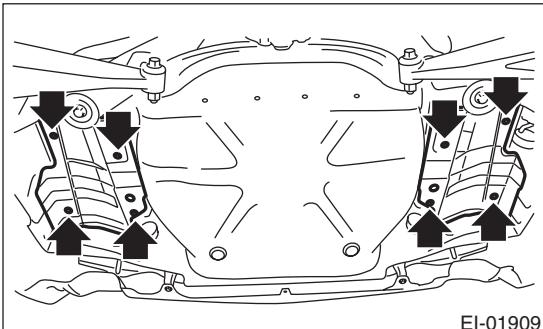

EI-01909

#### B: INSTALLATION

Install each part in the reverse order of removal.

##### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to EI-21, HEAT SHIELD COVER, COMPONENT, General Description.>*