


5. Mud Guard

A: REMOVAL


1. FRONT MUD GUARD

- 1) Jack-up the vehicle.
- 2) Remove the front wheels.
- 3) Remove the screws and clips to remove the mud guard.

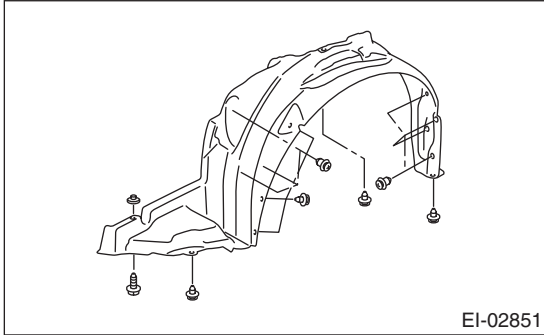

2. REAR MUD GUARD

- 1) Jack-up the vehicle.
- 2) Remove the rear wheels.
- 3) Remove the screws and clips to remove the mud guard.

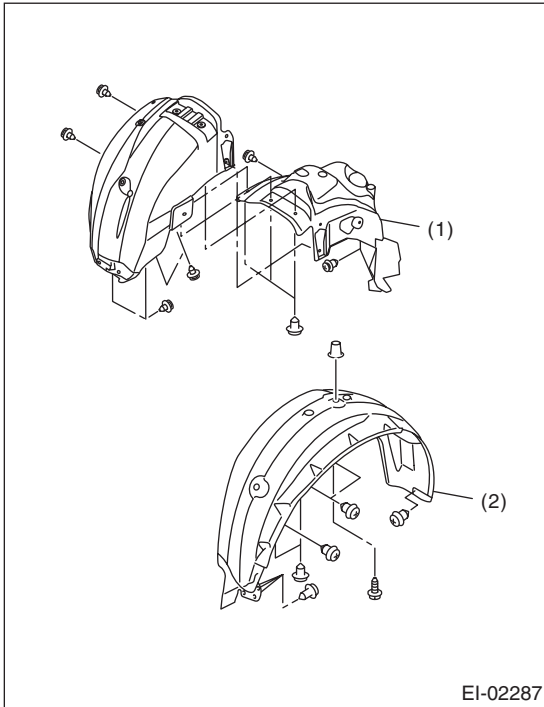

- (1) Rear mud guard RH
(2) Rear mud guard LH

B: INSTALLATION

Install each part in the reverse order of removal.