


8. Cowl Panel

A: REMOVAL


- 1) Open the front hood.
- 2) Remove the wiper arm. <Ref. to WW-14, REMOVAL, Front Wiper Arm.>
- 3) Detach the tabs and remove the cowl panel side.

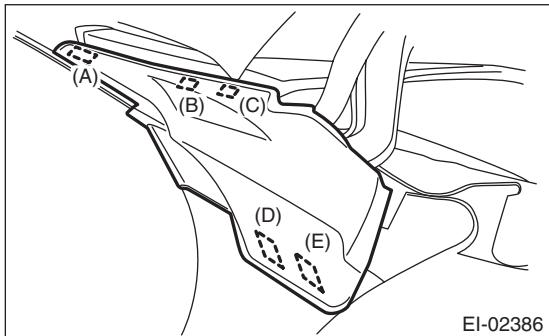


- (1) Detach tabs (A), (B), and (C) from the vehicle exterior.
- (2) Detach tabs (D) and (E).
- 4) Remove the clips (A) and (B), and remove the cowl panel.

NOTE:

Hook the claw of the cowl panel on the lower end of the windshield.

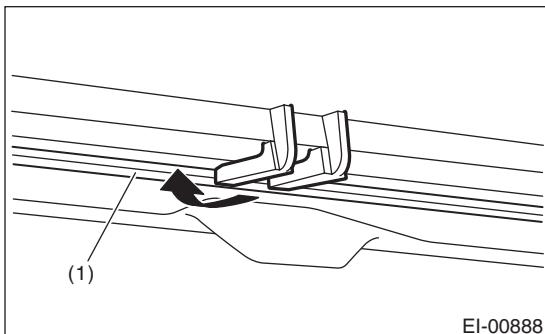


(1) Windshield cross section

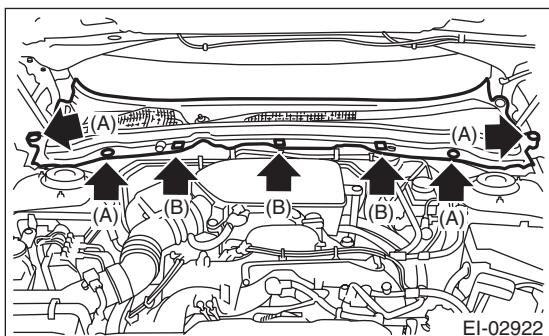

CAUTION:

When removing clip (B), push the claws of the clips from both the left and right to remove. If pulled with excessive force, the clip will become damaged.

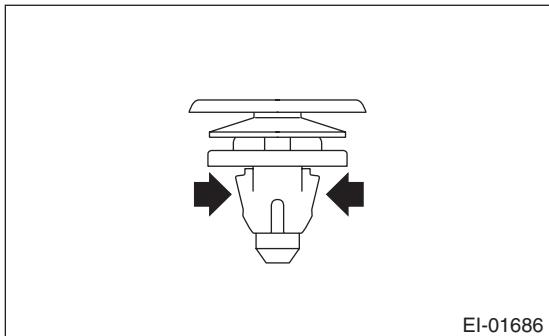

B: INSTALLATION

Install each part in the reverse order of removal.