



9. Roof Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-65, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the connector of high-mounted stop light and the washer hose of rear washer.
- 4) Remove the bolts and nuts.

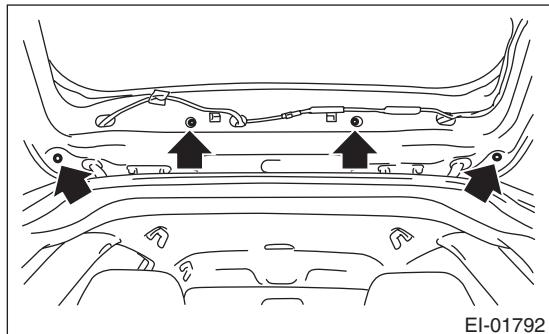

- 5) Remove the clips, and remove the roof spoiler.

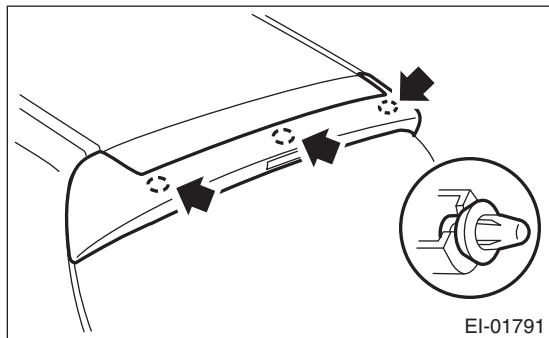

B: INSTALLATION

CAUTION:

- Improper installing may cause the water leakage, make sure the harness grommet is installed securely.
- Check that there is no foreign matter in roof spoiler between the high-mounted stop light harness or washer hose, it may cause washer defective and improper installation of spoiler.

Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)