

## 2. Power Window System

### A: WIRING DIAGRAM

Refer to "Power Window System" in WI section. <Ref. to WI-112, WIRING DIAGRAM, Power Window System.>

### B: INSPECTION

Symptoms	Repair order
All power windows do not operate.	<ol style="list-style-type: none"><li>1. Check the fuse (SBF-4).</li><li>2. Check the power window circuit breaker.</li><li>3. Check the power window relay.</li><li>4. Check the wiring harness.</li></ol>
Particular window does not operate.	<ol style="list-style-type: none"><li>1. Check the power window main switch.</li><li>2. Check the power window sub-switch.</li><li>3. Check the power window motor.</li><li>4. Check the wiring harness.</li></ol>
"Window Lock" does not operate.	Check the power window main switch.

### C: NOTE

For procedure of each component in the power window system, refer to the respective section.

- Power window control switch: <Ref. to GW-9, Power Window Control Switch.>
- Front door glass: <Ref. to GW-11, Front Door Glass.>
- Front regulator and motor assembly: <Ref. to GW-12, Front Regulator and Motor Assembly.>
- Rear door glass: <Ref. to GW-18, Rear Door Glass.>
- Rear regulator and motor assembly: <Ref. to GW-19, Rear Regulator and Motor Assembly.>