

6. Remote Control Mirror System

A: WIRING DIAGRAM

Refer to "Remote Control Mirror System" in WI section. <Ref. to WI-116, WIRING DIAGRAM, Remote Control Mirror System.>

B: INSPECTION

Symptoms	Repair order
All function does not operate.	<ol style="list-style-type: none">1. Check the fuse.2. Check the remote control mirror switch.3. Check the wiring harness.
One side of the mirror motor does not operate.	<ol style="list-style-type: none">1. Check the remote control mirror switch.2. Check the mirror motor.3. Check the wiring harness.
Mirror heater does not operate.	<ol style="list-style-type: none">1. Check the defogger switch.2. Check the mirror heater.3. Check the wiring harness.

NOTE:

The mirror heater operates simultaneously with the rear window defogger. Refer to the inspection procedure of rear window defogger system. <Ref. to GW-30, INSPECTION, Rear Window Defogger System.>

C: NOTE

For procedure of each component in the remote control mirror system, refer to the respective section.

- Scalp cap: <Ref. to GW-14, Scalp Cap.>
- Outer mirror assembly: <Ref. to GW-15, Outer Mirror Assembly.>
- Outer mirror: <Ref. to GW-16, Outer Mirror.>
- Remote control mirror switch: <Ref. to GW-17, Remote Control Mirror Switch.>