


## 7. Scalp Cap

### A: REPLACEMENT

1) Remove the mirror. <Ref. to GW-16, REPLACEMENT, Outer Mirror.>


2) Detach claw (A) from the inner side of the outer mirror, and remove the scalp cap.

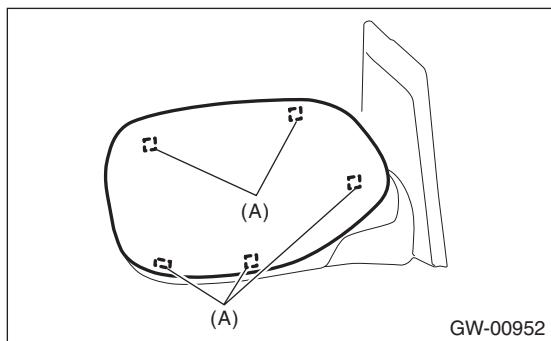

3) Detach claw (A) and (B) from the inner side of the outer mirror, and remove the lower cover.

#### CAUTION:

**Claw (B) cannot be removed from the inner side of the outer mirror. Be careful not to damage when removing.**

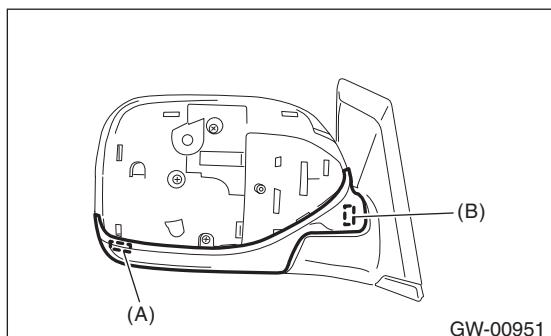

4) Install the scalp cap and lower cover securely.