


8. Outer Mirror Assembly

A: REMOVAL

- 1) Remove the front door trim. <Ref. to EI-41, REMOVAL, Door Trim.>
- 2) Disconnect the outer mirror connector.
- 3) Remove the bolts to remove outer mirror assembly.

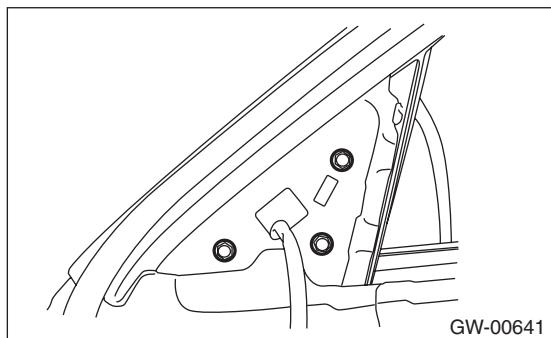

GW-00641

B: INSTALLATION

Install each part in the reverse order of removal.


Tightening torque:

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)

C: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.
- Model without mirror heater


- Model with mirror heater

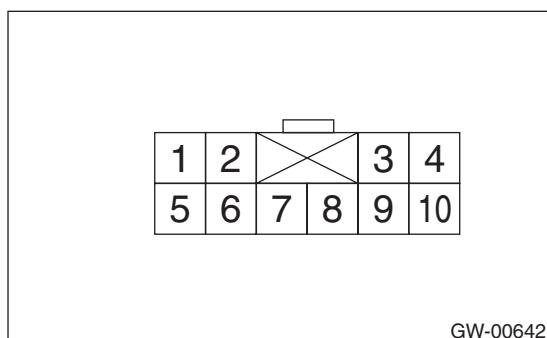

GW-00642

Switch position	Terminal No.
OFF	—
UP	7 (+) and 3 (-)
DOWN	3 (+) and 7 (-)
LEFT	8 (+) and 3 (-)
RIGHT	3 (+) and 8 (-)

- 3) If it does not operate normally, replace the outer mirror assembly.

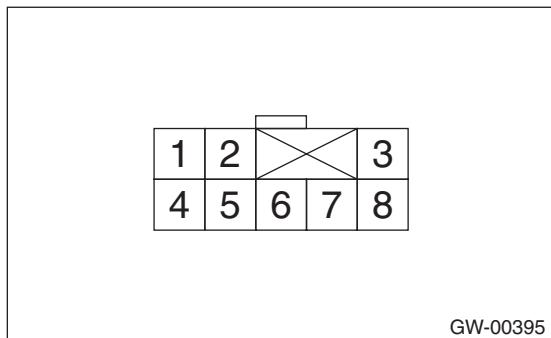

GW-00395

Switch position	Terminal No.
OFF	—
UP	6 (+) and 3 (-)
DOWN	3 (+) and 6 (-)
LEFT	7 (+) and 3 (-)
RIGHT	3 (+) and 7 (-)