

9. Diagnostics with Phenomenon

A: INSPECTION

Symptoms	Faulty parts
A/C system fails to operate.	• Fuse (F/B No. 7, 22, 31) • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay • A/C relay • Compressor (Magnet clutch) • Evaporator sensor • ECM
Fuse is blown out.	• Fuse (F/B No. 7, 22, 31) • Connector (Poor contact)
Illumination cannot dim.	• Fuse (F/B No. 7, 22, 31) • Connector (Poor contact) • Auto A/C control module
Blower fan does not rotate or fan speed cannot be controlled.	• Fuse (F/B No. 7, 22, 31) • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay • Power transistor
Unable to switch suction vents.	• Connector (Poor contact) • Auto A/C control module • Intake door actuator
Unable to switch vents.	• Connector (Poor contact) • Auto A/C control module • Mode door actuator
Compartment temperature does not rise. (Warm air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Compartment temperature does not lower. (Cold air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • A/C relay • Compressor (Magnet clutch) • Radiator fan motor • Radiator fan relay • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Compartment temperature is higher or lower than setting temperature.	• Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Compartment temperature does not quickly respond to setting temperature.	• Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose

Diagnostics with Phenomenon

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Symptoms	Faulty parts
Radiator fan does not rotate during A/C operation.	• Radiator fan motor • Radiator fan relay • ECM

AIRBAG SYSTEM

AB


	Page
1. General Description	2
2. Airbag Connector	9
3. Inspection Locations After a Collision	13
4. Driver's Airbag Module	16
5. Passenger's Airbag Module	17
6. Side Airbag Module	18
7. Curtain Airbag Module	20
8. Airbag Control Module	22
9. Front Sub Sensor	23
10. Side Airbag Sensor	24
11. Curtain Airbag Sensor	25
12. Satellite Safing Sensor	26
13. Roll Connector	27

General Description

AIRBAG SYSTEM

1. General Description

A: COMPONENT

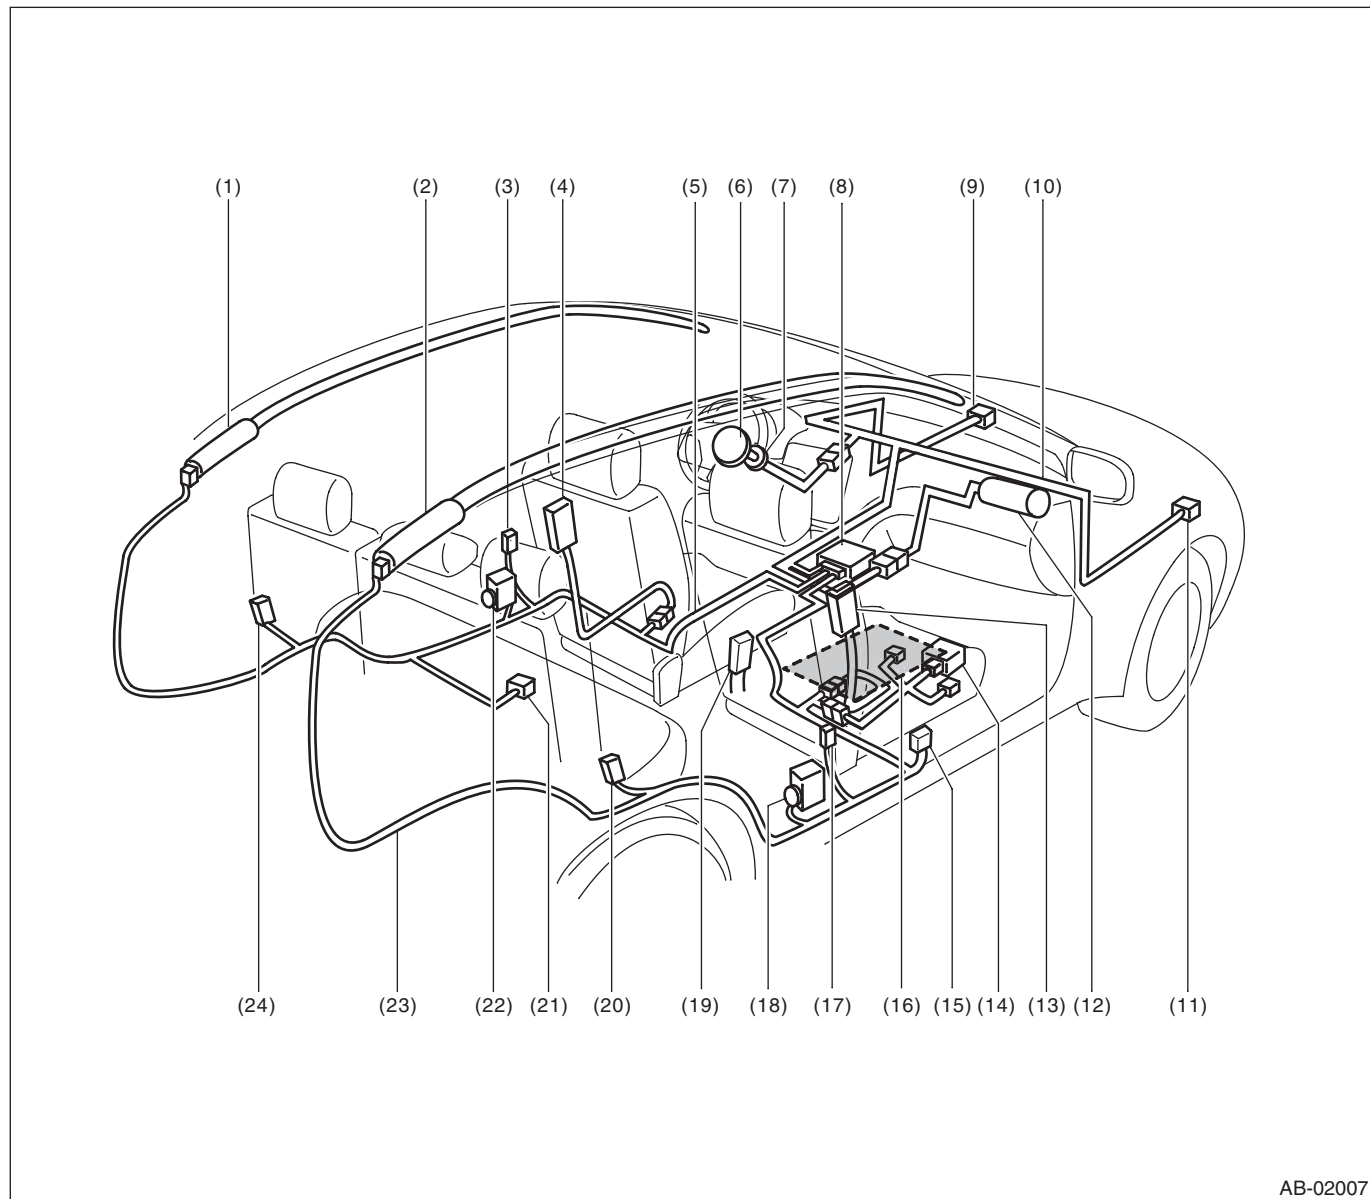

AB-02007

- | | | |
|---|--|--------------------------------|
| (1) Curtain airbag module LH | (9) Front sub sensor LH | (17) Side airbag sensor RH |
| (2) Curtain airbag module RH | (10) Front airbag harness | (18) Seat belt pretensioner RH |
| (3) Side airbag sensor LH | (11) Front sub sensor RH | (19) Buckle switch RH |
| (4) Side airbag module LH | (12) Airbag module ASSY (Passenger) | (20) Curtain airbag sensor RH |
| (5) Airbag rear harness LH | (13) Side airbag module RH | (21) Satellite safing sensor |
| (6) Airbag module ASSY (Driver) | (14) Occupant detection control module | (22) Seat belt pretensioner LH |
| (7) Combination switch ASSY with roll connector | (15) Belt tension sensor | (23) Airbag rear harness RH |
| (8) Airbag control module | (16) Occupant detection sensor | (24) Curtain airbag sensor LH |