


Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Blower Resistor (Manual A/C Model)

A: REMOVAL

- 1) Remove the instrument panel lower. <Ref. to EI-49, INSTRUMENT PANEL, LOWER, REMOVAL, Center Console.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the screw and remove the blower resistor.

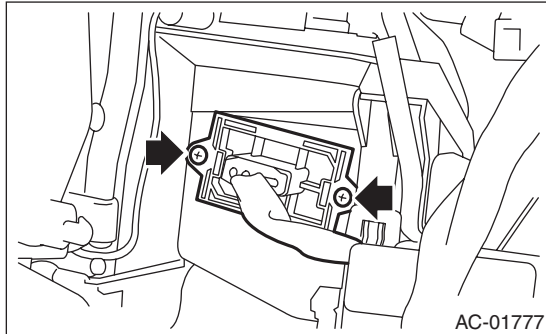


B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the blower resistor connector.
- 2) Check the resistance between blower resistor terminals.

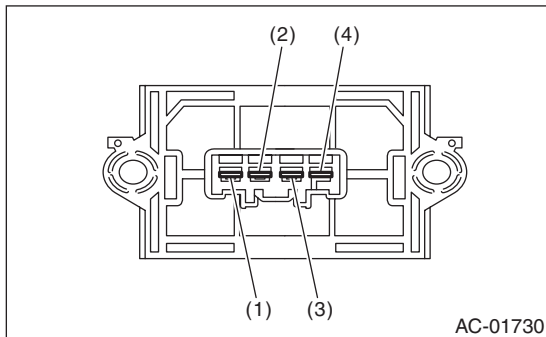

Terminal No.	Standard
4 and 3	Approx. 0.43 Ω
4 and 2	Approx. 1.03 Ω
4 and 1	Approx. 3.0 Ω

- 3) Replace the blower resistor if the inspection result is not within the standard value.