


Control Unit (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


12. Control Unit (Manual A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ornament panel. <Ref. to EI-47, ORNAMENT PANEL, REMOVAL, Center Console.>
- 3) Remove the control wires from both sides of the heater and cooling unit.

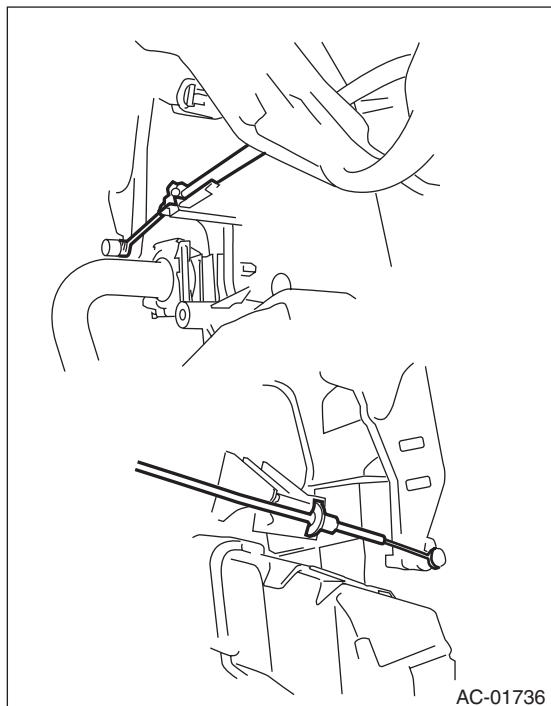

- 4) Remove the screws and claws, and remove the control module from the ornament panel.

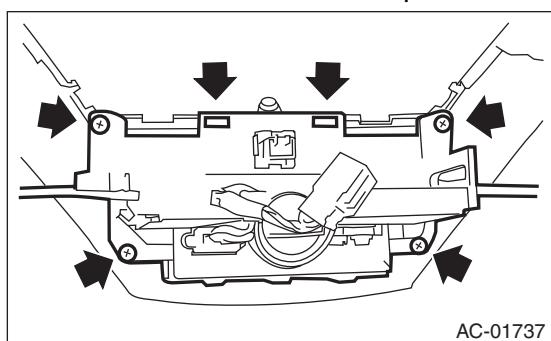

B: INSTALLATION

CAUTION:

Securely assemble the plate at the end of the control wire to the heater case.

Install each part in the reverse order of removal.