


# Compressor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


## 14. Compressor

### A: REMOVAL


- 1) Perform compressor oil return operation. *<Ref. to AC-24, PROCEDURE, Compressor Oil.>*
- 2) Turn the A/C switch to OFF and stop the engine.
- 3) Using the refrigerant recovery system, discharge refrigerant. *<Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>*
- 4) Disconnect the ground cable from battery.
- 5) Remove the V-belts. *<Ref. to ME(H4SO)-39, REMOVAL, V-belt.>*
- 6) Remove the generator. *<Ref. to SC(H4SO)-16, REMOVAL, Generator.>*
- 7) Remove the bolt and remove the low-pressure hose and high-pressure hose.

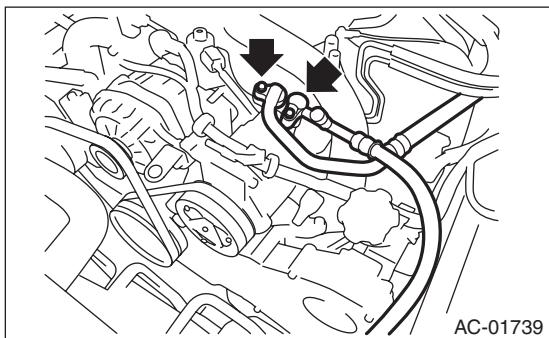

- 8) Disconnect the compressor connector.
- 9) Remove the bolts and remove the compressor bracket.

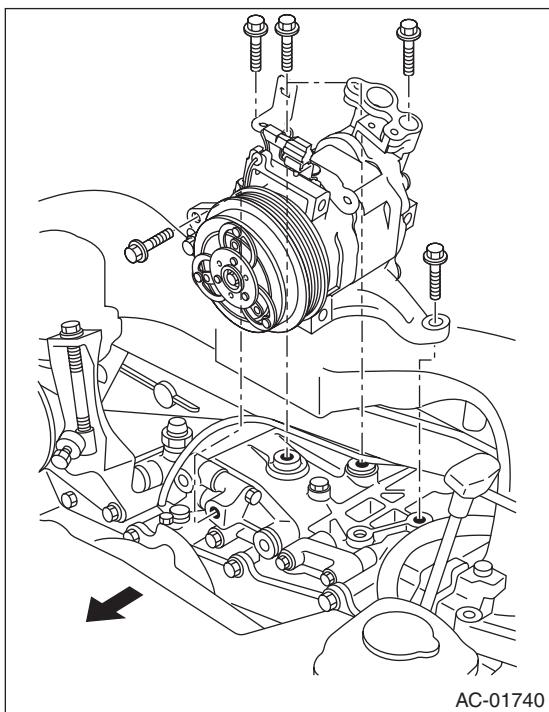

- 10) Remove the bolts, then remove the bracket from the compressor.

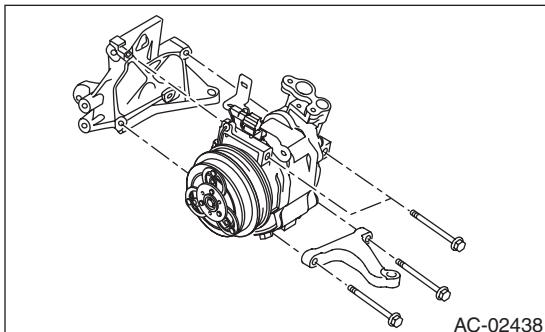

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Replace the O-rings on low/high pressure hoses with new parts, and apply compressor oil.
- 3) After replacing the compressor, adjust the amount of the compressor oil. *<Ref. to AC-24, PROCEDURE, Compressor Oil.>*
- 4) Charge refrigerant. *<Ref. to AC-20, PROCEDURE, Refrigerant Charging Procedure.>*

#### **Tightening torque:**

*Refer to “COMPONENT” of “General Description”.*

*Air conditioning unit: <Ref. to AC-9, AIR CONDITIONING UNIT, COMPONENT, General Description.>*

*Radiator & radiator fan: <Ref. to CO(H4SO)-4, RADIATOR & RADIATOR FAN, COMPONENT, General Description.>*

### C: INSPECTION

#### 1. MAGNETIC CLUTCH CLEARANCE

- 1) Check the clearance of entire circumference around the drive plate and pulley.

#### **Specification:**

**0.3 — 0.6 mm (0.0118 — 0.0236 in)**

- 2) Replace the compressor if the inspection result is not within the standard value.

#### 2. MAGNETIC CLUTCH OPERATION

- 1) Disconnect the compressor connector.
- 2) Connect the battery positive (+) terminal to the terminal of the compressor connector.
- 3) Check the magnet clutch engagement.
- 4) If the magnet clutch does not operate normally, replace the compressor.