


Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

19. Relay and Fuse

A: LOCATION

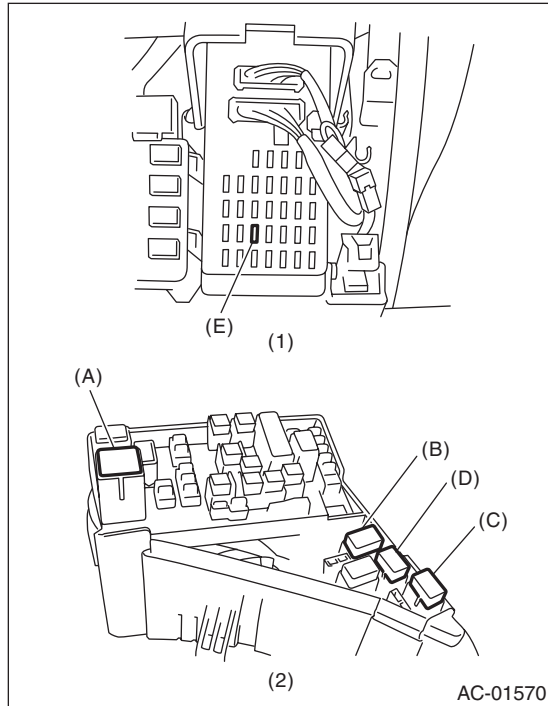

- (1) Joint box
(2) Main fuse box

Main fan relay 1	(A)
Main fan relay 2	(B)
Sub fan relay	(C)
A/C relay	(D)
A/C fuse	(E)


B: INSPECTION

1. FUSE


- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

2. RELAY

- 1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the relay terminals.

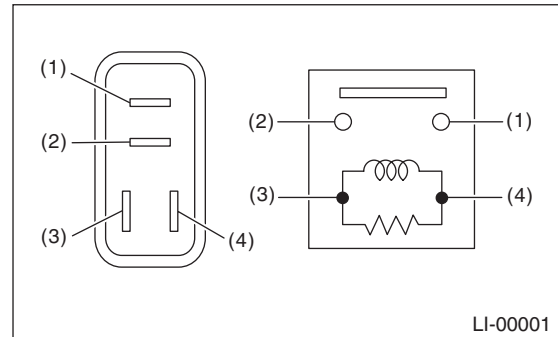

LI-00001

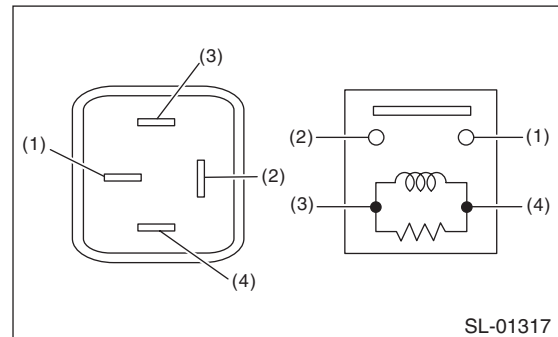

SL-01317

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

- 2) Replace the relay if it is found defective.