

23. In-Vehicle Sensor (Auto A/C Model)

A: REMOVAL

CAUTION:

Be careful not to damage the sensors and interior trims when removing.

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the screws.
- 4) Disconnect the in-vehicle sensor connector and aspirator hose, and remove the in-vehicle sensor from the instrument panel.



B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to "In-Vehicle Sensor" of HVAC SYSTEM (AUTO A/C)(DIAGNOSTICS). <Ref. to AC(diag)-31, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>