


24. Air Vent Grille

A: REMOVAL

1. CENTER GRILLE


- 1) Insert a plastic remover into the slit at the bottom of the center panel, to lift the panel.
- 2) Remove the claws and resin hook and then remove the center panel.

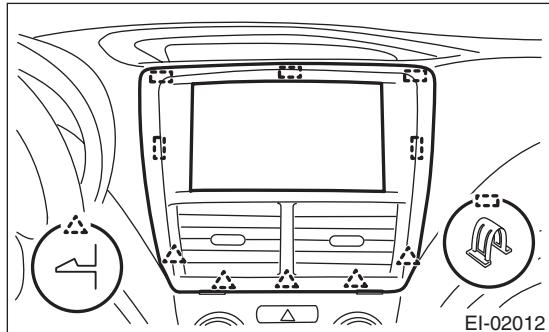

- 3) Remove the claws, and remove the air vent center grille from the center panel.

2. SIDE GRILLE

- 1) Remove the ornament panel. <Ref. to EI-47, ORNAMENT PANEL, REMOVAL, Center Console.>
- 2) Remove the claws, and remove the air vent side grille.

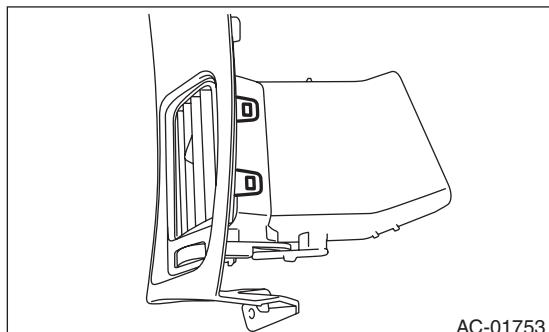

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly. Replace the air vent grille if faulty.
- 2) Check that the adjustment can be maintained in each position. Replace the air vent grille if faulty.