


## 8. Clock

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the audio. (model with audio) <Ref. to ET-6, REMOVAL, Audio.>
- 3) Remove the navigation unit. (model with navigation) <Ref. to ET-14, PROCEDURE, Navigation Body.>
- 4) Reach through the audio space to release the four tabs from the bracket behind the instrument panel.

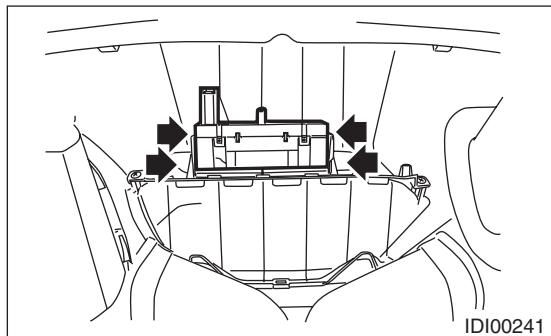

- 5) Disconnect the harness connector and remove the clock.

### B: INSTALLATION

Install each part in the reverse order of removal.

# SEATS

**SE**

---

	Page
1. General Description .....	2
2. Front Seat .....	8
3. Rear Seat .....	13
4. Seat Heater System .....	16