



10. Combination Base Switch Assembly

A: REMOVAL

- 1) Remove the driver's airbag module. <Ref. to AB-16, REMOVAL, Driver's Airbag Module.>
- 2) Remove the steering wheel. <Ref. to PS-12, REMOVAL, Steering Wheel.>
- 3) Remove the combination switch. <Ref. to LI-11, REMOVAL, Combination Switch (Light).> <Ref. to WW-7, REMOVAL, Combination Switch (Wiper).>
- 4) Remove the screws, and then remove the roll connector.

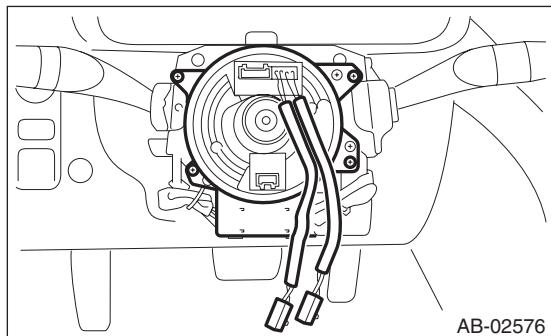

- 5) Remove the screws.

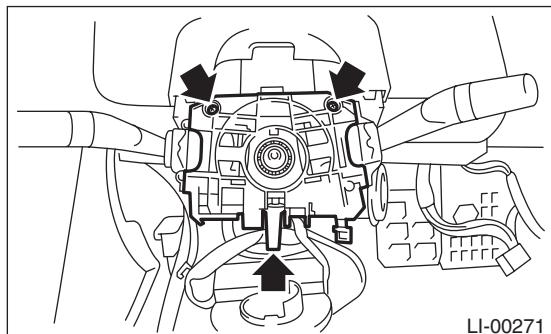

- 6) Disconnect the harness connector and remove the combination base switch assembly.

B: INSTALLATION

- 1) Install each part in the reverse order of removal.
- 2) Before installing steering wheel, be sure to adjust the direction of roll connector with steering. <Ref. to AB-28, ADJUSTMENT, Roll Connector.>

C: INSPECTION

1. COMBINATION BASE SWITCH ASSEMBLY

Inspect the combination base switch assembly and roll connector for cracks or deformation. If any damage is found, replace with a new part.