


## 18. Tail/Stop Light Bulb

### A: REMOVAL

#### 1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim cover. <Ref. to EI-59, REMOVAL, Trunk Room Trim.>
- 3) Turn the socket and remove the bulb.

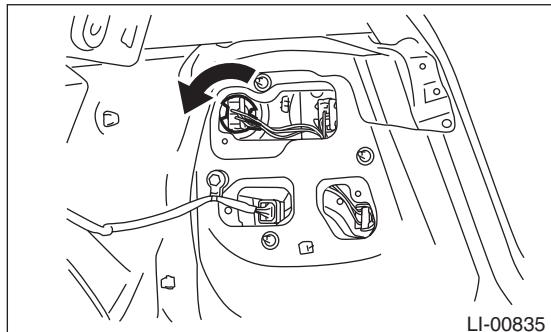

#### 2. 5 DOOR MODEL

Since LED (Light Emitting Diode) is used for the tail light / stop light bulb, they can not be removed.

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

#### 1. 4 DOOR MODEL

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.

#### 2. 5 DOOR MODEL

- 1) Install the rear combination light assembly and check that it blinks normally.
- 2) If it fails to blink normally, replace the rear combination light assembly with a new part.

#### NOTE:

Since LED (Light Emitting Diode) is used for the tail light/stop light bulb, replace the rear combination light assembly if the LED burns out.