


## 21. Back-up Light Bulb

### A: REMOVAL

#### 1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim cover. <Ref. to EI-59, REMOVAL, Trunk Room Trim.>
- 3) Turn the socket and remove the bulb.

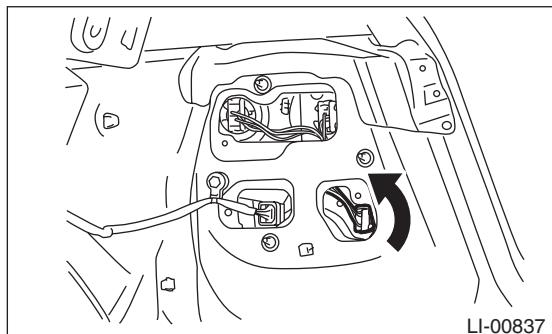


#### 2. 5 DOOR MODEL

##### NOTE:

For models with a rear fog light, the back-up light is installed on the passenger's side.

- 1) Disconnect the ground cable from battery.
- 2) Remove the bulb inspection cover of the rear gate trim.
- 3) Turn the socket and remove the bulb.

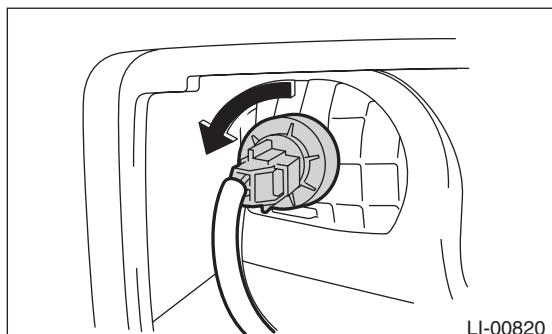

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.