


23. High-mounted Stop Light

A: REMOVAL

1. 4 DOOR MODEL (STANDARD TYPE)


- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector of the high-mounted stop light from the body harness.
- 3) Remove the bolt, then remove the high-mounted stop light assembly.

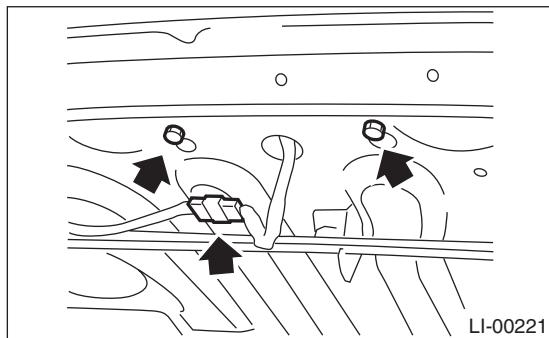

LI-00221

2. 4 DOOR MODEL (WITH BUILT-IN REAR SPOILER)

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear spoiler. <Ref. to EI-38, REMOVAL, Rear Spoiler.>
- 3) Remove the caps and screws, then detach the high-mounted stop light.

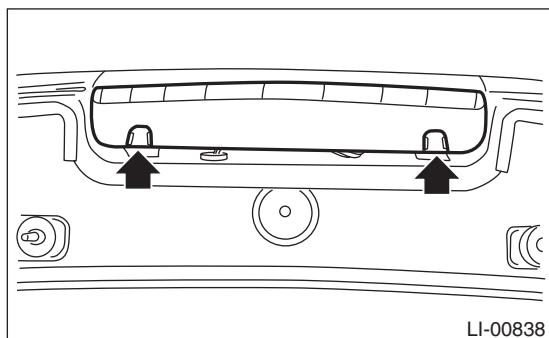


LI-00838

3. 5 DOOR MODEL (WITH BUILT-IN SMALL TYPE ROOF SPOILER)

- 1) Disconnect the ground cable from the battery.
- 2) Remove the roof spoiler. <Ref. to EI-37, REMOVAL, Roof Spoiler.>


- 3) Remove the nuts, then detach the high-mounted stop light.

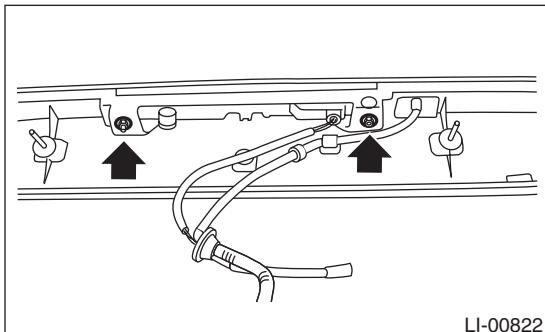

LI-00822

4. 5 DOOR MODEL (WITH BUILT-IN LARGE TYPE ROOF SPOILER)

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof spoiler. <Ref. to EI-37, REMOVAL, Roof Spoiler.>
- 3) Remove the caps and screws, then detach the high-mounted stop light.

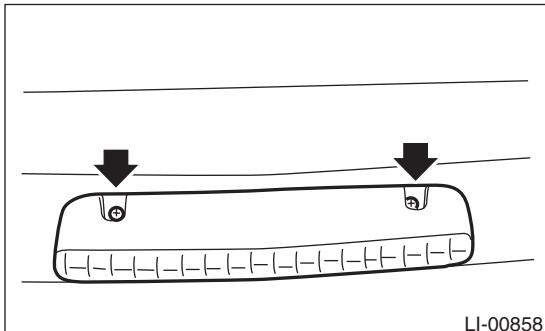

LI-00858

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. 4 DOOR MODEL (STANDARD TYPE)

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.

2. EXCEPT FOR 4 DOOR MODEL (STANDARD TYPE)

- 1) Install the high-mounted stop light to test if it illuminates normally.
- 2) If it fails to illuminate normally, replace the high-mounted stop light with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the high-mounted stop light, replace the high-mounted stop light assembly if the LED burns out.