


30. Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screw, and pull out the door switch.

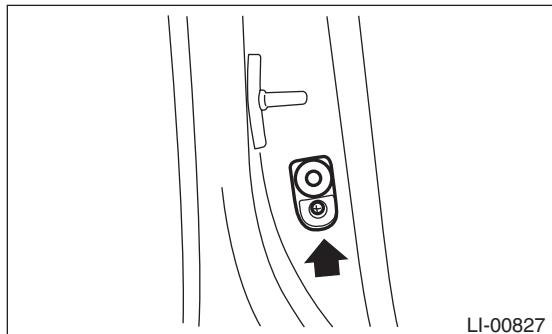

- 3) Disconnect the harness connector and remove the door switch.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to the door switch inspection of the room light system. <Ref. to LI-10, DOOR SWITCH, INSPECTION, Room Light System.>

WIPER AND WASHER SYSTEMS

WW

	Page
1. General Description	2
2. Wiper and Washer System	6
3. Combination Switch (Wiper)	7
4. Wiper Blade	11
5. Washer Tank and Motor	13
6. Front Wiper Arm	14
7. Front Wiper Motor and Link	15
8. Front Washer Nozzle	17
9. Rear Wiper Arm	18
10. Rear Wiper Motor	19
11. Rear Washer	20