

# Front Fog Light System

## LIGHTING SYSTEM

### 4. Front Fog Light System

#### A: WIRING DIAGRAM

Refer to "Front Fog Light System" in WI section.  
<Ref. to WI-83, WIRING DIAGRAM, Front Fog Light System.>


#### B: INSPECTION

##### 1. FRONT FOG LIGHT SWITCH

Measure the resistance between front fog light switch terminals. <Ref. to LI-12, INSPECTION, Combination Switch (Light).>

##### 2. FRONT FOG LIGHT RELAY

- 1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the front fog light relay terminals.

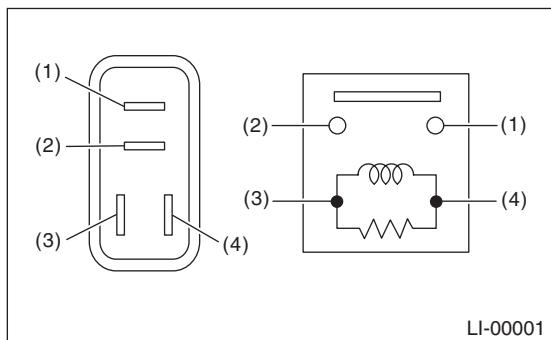

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 MΩ or more

- 2) Replace the front fog light relay if it is found defective.