

5. Turn Signal Light and Hazard Light System

A: WIRING DIAGRAM

Refer to "Turn Signal Light and Hazard Light System" in WI section. <Ref. to WI-92, WIRING DIAGRAM, Turn Signal Light and Hazard Light System.>


B: INSPECTION

1. TURN SIGNAL SWITCH

Measure the resistance between turn signal switch terminals. <Ref. to LI-12, INSPECTION, Combination Switch (Light).>

2. HAZARD SWITCH

1) Measure the resistance between hazard switch terminals.

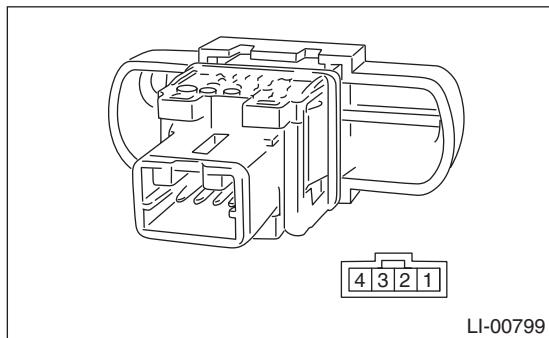


Switch position	Terminal No.	Standard
OFF	2 and 3	1 MΩ or more
ON		Less than 1 Ω

2) Replace the hazard switch if it is found defective.

3. TURN SIGNAL AND HAZARD MODULE

1) Connect the battery and turn signal light bulb to the module. The module is properly functioning if it blinks when power is supplied to the circuit.

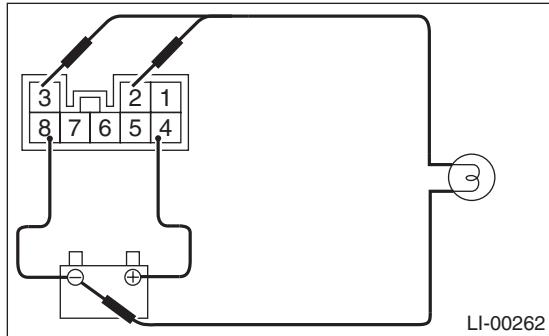

2) Replace the turn signal & hazard module if it is found defective.