



9. Combination Switch (Light)

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.

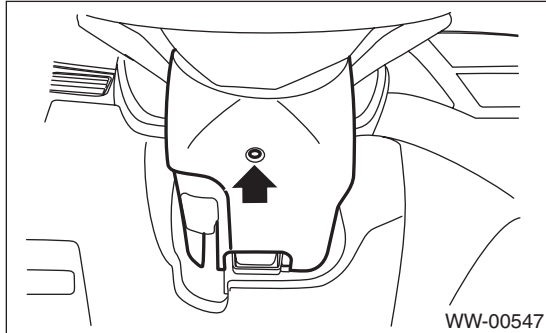


- 3) Remove the screws and remove the steering column cover upper.

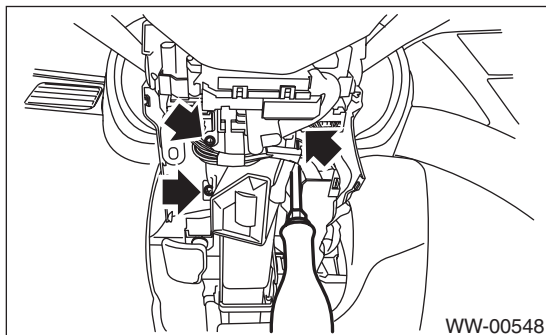

- 4) Disconnect the connector from combination switch.
- 5) Remove the screws, and pull out the combination base switch assembly toward you.

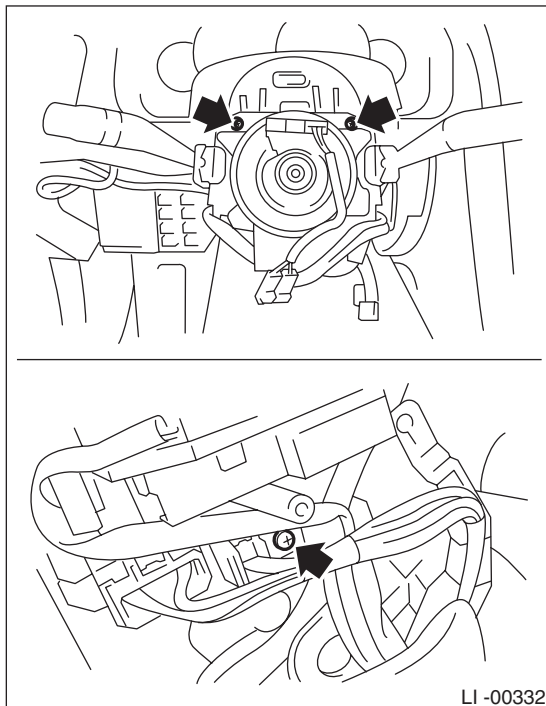

- 6) Remove the screws which secure the switch, then remove the combination switch.

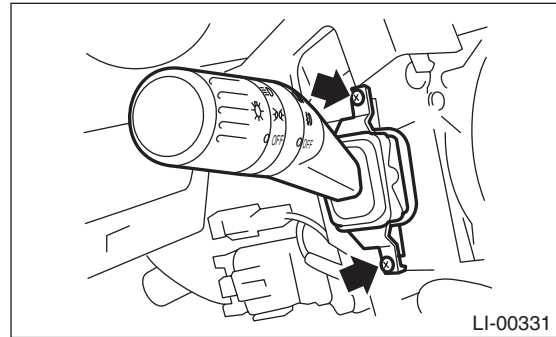

B: INSTALLATION


Install each part in the reverse order of removal.

Combination Switch (Light)

LIGHTING SYSTEM

C: INSPECTION

- 1) Disconnect the combination switch connector.
- 2) Check the resistance between combination switch terminals.

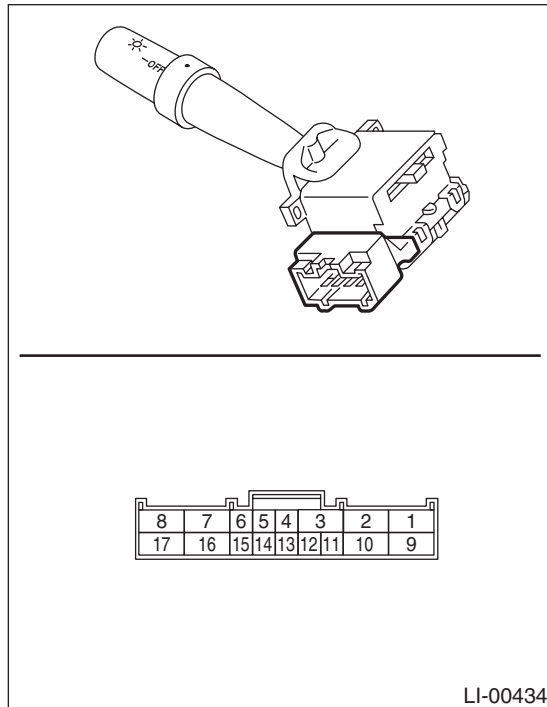

- 3) Replace the combination switch (light) if the inspection result of each switch is not within the standard value.

1. LIGHTING SWITCH

Switch position	Terminal No.	Standard
OFF	—	1 M Ω or more
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

2. DIMMER & PASSING SWITCH

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

3. TURN SIGNAL SWITCH

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1 Ω
Neutral	—	1 M Ω or more
Right	3 and 2	Less than 1 Ω

4. FRONT FOG LIGHT SWITCH

Switch position	Terminal No.	Standard
OFF	11 and 10	1 M Ω or more
ON		Less than 1 Ω