


4. Seat Heater System

A: REMOVAL

1. SEAT HEATER MODULE

- 1) Remove the front seats. <Ref. to SE-8, REMOVAL, Front Seat.>
- 2) Remove the backrest cover of front seat and seat cushion cover. <Ref. to SE-8, DISASSEMBLY, Front Seat.>
- 3) Remove the seat heater module.

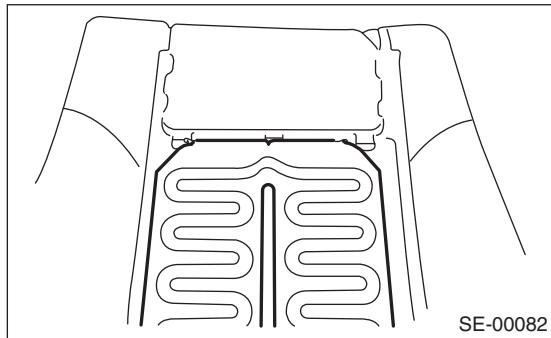

2. SEAT HEATER SWITCH

- 1) Remove the console box. <Ref. to EI-46, REMOVAL, Console Box.>
- 2) Remove the seat heater switch from the console box.

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. WIRING DIAGRAM

<Ref. to WI-79, WIRING DIAGRAM, Seat Heater System.>

2. SEAT HEATER MODULE


- 1) Disconnect the seat heater module connector, and check the continuity between terminals of connector.

Connector & terminal

No. 1 — No. 3:

No. 1 — No. 4:

No. 3 — No. 4:

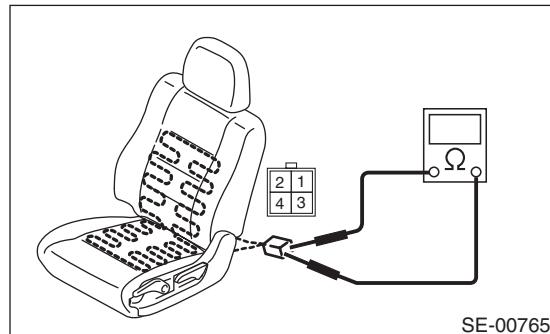

Is there continuity between connector terminals?

- **Continuity exists.** →

Seat heater module is normal. If there is a malfunction, check the seat heater switch and vehicle body side harness.


- **Continuity does not exist.** →

No. 1 — No. 3: → Go to step 2).

No. 1 — No. 4: → Go to step 2).

No. 3 — No. 4: → Replace the seat heater module of seat cushion side.

- 2) Disconnect the seat heater module of backrest side, and check the continuity between connector terminals of the seat heater module unit of backrest side.

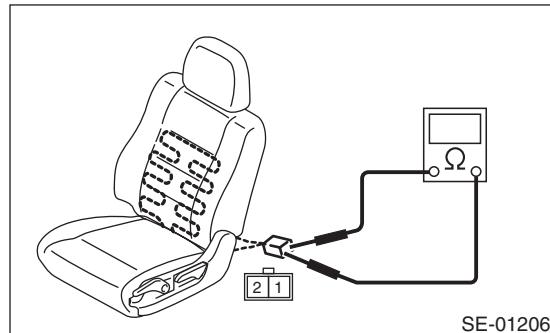

Is there continuity between connector terminals?


- **Continuity exists.** →

Replace the seat heater module of seat cushion side.


- **Continuity does not exist.** →

Replace the seat heater module of backrest side.

3. SEAT HEATER SWITCH

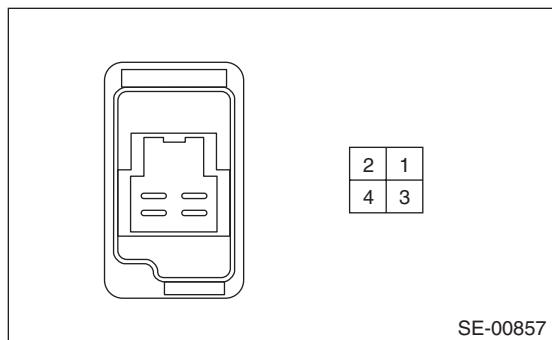

- 1) Inspect the continuity between the seat heater switch terminals.

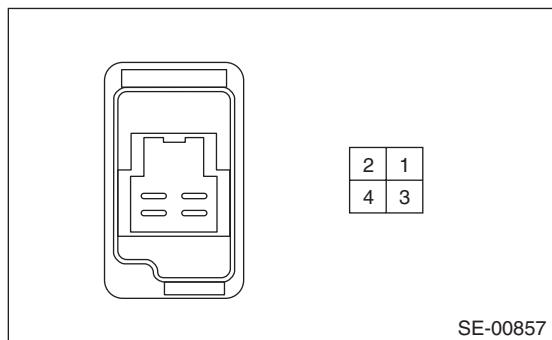

Connector & terminal

HI

No. 2 — No. 1:
No. 2 — No. 3:
No. 1 — No. 3:
No. 4 — No. 3:

LOW

No. 2 — No. 4:
No. 2 — No. 3:
No. 4 — No. 3:

- 2) If no continuity exists, replace the seat heater switch with a new part.

Seat Heater System

SEATS

SECURITY AND LOCKS

SL

	Page
1. General Description	2
2. Door Lock Control System	8
3. Keyless Entry System	13
4. Security System	25
5. Front Inner Remote	29
6. Front Outer Handle	30
7. Front Door Latch and Door Lock Actuator Assembly	31
8. Rear Inner Remote	32
9. Rear Outer Handle	33
10. Rear Door Latch and Door Lock Actuator Assembly	34
11. Rear Gate Opener Button	35
12. Rear Gate Latch and Actuator Assembly	36
13. Trunk Lid Latch and Actuator Assembly	37
14. Front Hood Lock Assembly	38
15. Remote Openers	39
16. Ignition Key Lock	41
17. Key Lock Cylinders	42
18. Security Control Module	43
19. Impact Sensor	44
20. Keyless Entry Control Module	45
21. Keyless Buzzer	46
22. Body Integrated Unit	47
23. Transmitter	48
24. Immobilizer Control Module	50
25. Immobilizer Antenna	51