


Rear Door Latch and Door Lock Actuator Assembly

SECURITY AND LOCKS


10. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-41, REMOVAL, Door Trim.>
- 3) Remove the wire from the rear inner remote. <Ref. to SL-32, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-25, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-18, REMOVAL, Rear Door Glass.>
- 6) Disconnect the harness connector.
- 7) Remove the screws, and remove the rear door latch&door lock actuator assembly.

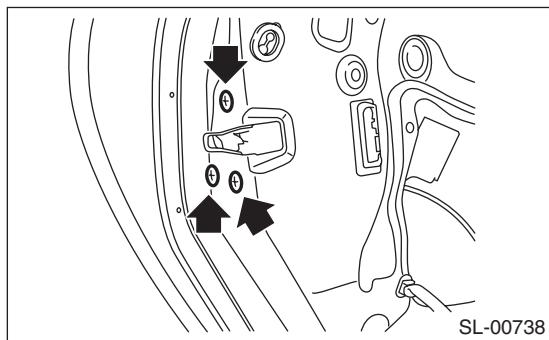

- 2) Connect the battery to door lock actuator terminals.

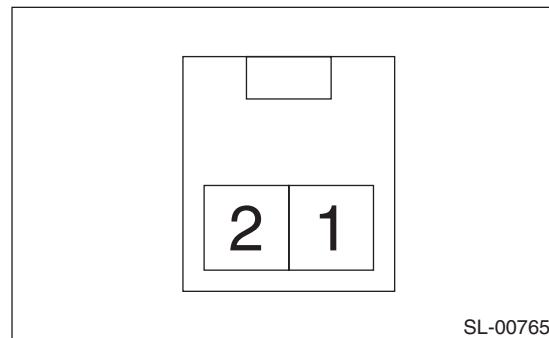

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	—	+
Unlock → Lock	+	—

- 3) If the actuator does not operate normally, replace the rear door latch&door lock actuator assembly.

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

1. DOOR LATCH

Check if the rear door latch operates normally.

- If the cable or rod is faulty, replace the rear door latch&door lock actuator assembly.

2. LOCK ACTUATOR

- 1) Disconnect the door lock actuator harness connector.