


11. Rear Gate Opener Button

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-65, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate garnish. <Ref. to EI-68, REMOVAL, Rear Gate Garnish.>
- 3) Hold down the rear gate opener button hook, and remove the rear gate opener button.

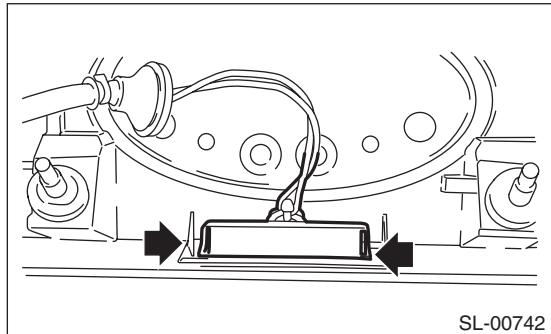

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is securely installed.

If not properly installed, this may cause water immersion.

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the rear gate opener button harness connector.
- 2) Check the resistance between rear gate opener button connector terminals.

Switch	Terminal No.	Standard
Open	1 and 2	Less than $1\ \Omega$
Close		$1\ M\Omega$ or more

- 3) Replace the rear gate opener button if the inspection result is not within the standard value.