



12. Rear Gate Latch and Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-65, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the bolts to remove the rear gate latch and actuator assembly.

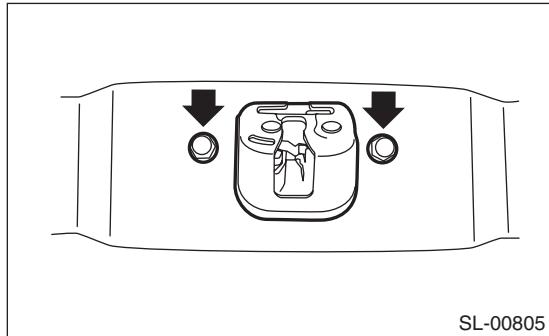

- 2) Connect the battery between the rear gate latch and actuator assembly terminals.

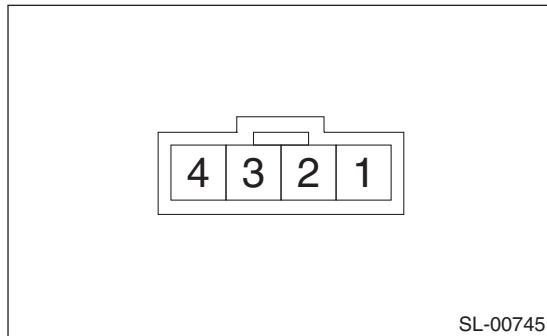

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	+	-

- 3) If the actuator does not operate normally, replace the rear gate latch&actuator assembly.

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-3, REAR GATE LOCK AND TRUNK LID, COMPONENT, General Description.>

C: INSPECTION

1. REAR GATE LATCH

Check if the rear gate latch operates normally.

- If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the rear gate latch&actuator assembly.

2. LOCK ACTUATOR

- 1) Disconnect the harness connector of rear gate latch and actuator assembly.