



13. Trunk Lid Latch and Actuator Assembly

A: REMOVAL

- 1) Disconnect the connector to remove the trunk opener cable.
- 2) Remove the bolts, and remove the trunk lid latch&actuator assembly.

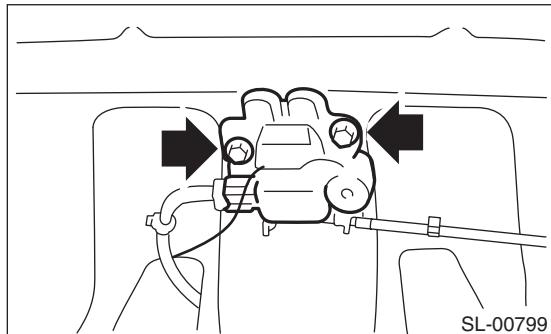

- 2) Connect the battery between the trunk lid latch and actuator assembly terminals.

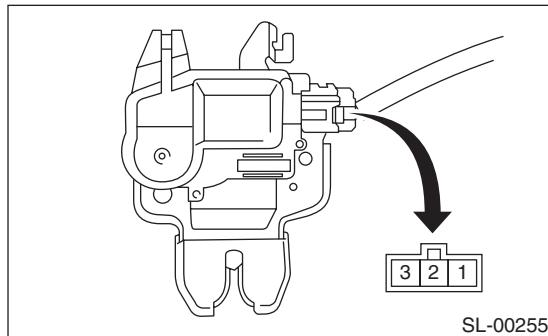

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	—	+

- 3) If the actuator does not operate normally, replace the trunk lid latch&actuator assembly

B: INSTALLATION

CAUTION:

Route the safety lever wire so that it runs inside the trunk panel.

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-3, REAR GATE LOCK AND TRUNK LID, COMPONENT, General Description.>

NOTE:

Apply grease to the movable part.

C: INSPECTION

1. TRUNK LID LATCH

Check if the trunk lid latch operates normally.

- If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the rear gate latch&actuator assembly.

- 1) Check the trunk opener cable for smooth operation.

2. LOCK ACTUATOR

- 1) Disconnect the harness connector of trunk lid latch and actuator assembly.