


## 14. Front Hood Lock Assembly

### A: REMOVAL

- 1) Open the front hood.
- 2) Remove the front bumper face. <Ref. to EI-27, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 3) Remove the bolts, and then detach the front hood lock assembly.
- 4) Remove the release cable from the lock assembly.

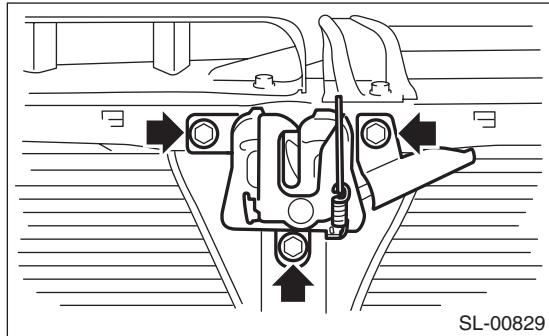

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*


Refer to "COMPONENT" of "General Description". <Ref. to SL-4, FRONT HOOD LOCK AND REMOTE OPENERS, COMPONENT, General Description.>

NOTE:

Apply grease to the movable part.

### C: ADJUSTMENT

- 1) Loosen the bolt, and adjust the lock assembly while moving it up and down.

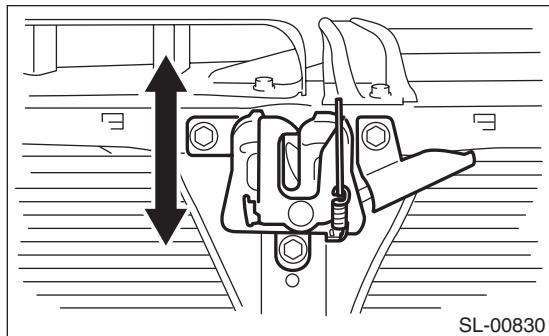

- 2) After adjustment, tighten the bolts securely.

### D: INSPECTION

Check if the front hood lock ASSY operates normally.

- If latch deformation, abnormal wear, or unsmooth lock operation is observed, replace the front hood lock assembly.